


# Suspension Parts & Poly Bushings for TOYOTA LAND CRUISER 1998-2007 - 100 Series

## Parts Application Diagrams

### Double Wishbone


With Upper And Lower Arm With Drive Shaft

\*As viewed from the Front of the Vehicle

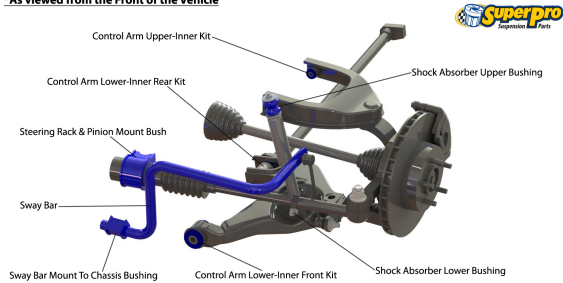

### Coil Spring Solid Axle

With Panhard Rod, Upper And Lower Trailing Arms

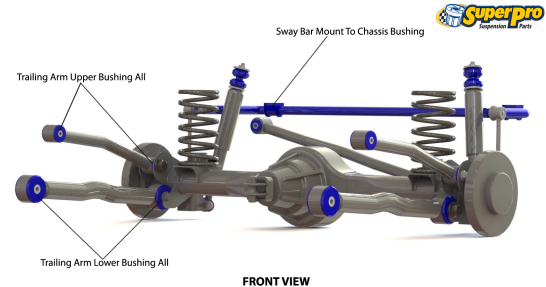

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	30mm Heavy Duty Non Adjustable Sway Bar	<a href="#">RC0048F-30</a>	1	Roll Control
Front	33mm Heavy Duty Non Adjustable Sway Bar	<a href="#">RC0048F-33</a>	1	Roll Control
Front	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF2143K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit	<a href="#">SPF3881K</a>	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit	<a href="#">SPF2142K</a>	1	SuperPro SPF
Front	Differential Lower Support Bush Kit	<a href="#">SPF3575K</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	<a href="#">SPF1575-90K</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	<a href="#">SPF1575K</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	<a href="#">SPF3591K</a>	1	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	<a href="#">SPF2350K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	<a href="#">SPF2470K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush	<a href="#">SPF2987K</a>	1	SuperPro SPF
Front	Sway Bar End Link Bush Kit	<a href="#">SPF0094K</a>	1	SuperPro SPF
Front	Sway Bar Link Lower Bush Kit	<a href="#">SPF2147K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1155-25K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1155-26K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1155-27K</a>	1	SuperPro SPF
Front and Rear	Complete Vehicle Enhancement Kit	<a href="#">KIT238K</a>	1	Vehicle Kits
Rear	27mm Heavy Duty Non Adjustable Sway Bar	<a href="#">RC0048R-27</a>	1	Roll Control

Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-10K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-15K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-20K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-30K</a>	2	SuperPro SPF
Rear	Panhard Rod Bush Kit	<a href="#">SPF2464K</a>	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit	<a href="#">SPF2352K</a>	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	<a href="#">SPF2351K</a>	1	SuperPro SPF
Rear	Sway Bar End Link Bush Kit	<a href="#">SPF0280K</a>	1	SuperPro SPF
Rear	Sway Bar Link Kit - Heavy Duty Extra length links to return sway bar to original position on a lifted vehicle.	<a href="#">TRC0039</a>	1	Roll Control
Rear	Sway Bar Link Upper Bush Kit	<a href="#">SPF0903-4K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1319-22K</a>	1	SuperPro SPF
Rear	Trailing Arm & Panhard Rod Bush Kit	<a href="#">KIT097K</a>	1	Vehicle Kits
Rear	Trailing Arm Lower Bush Kit	<a href="#">SPF2460K</a>	2	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit 14mm Bolt	<a href="#">SPF2461K</a>	2	SuperPro SPF