


# Suspension Parts & Poly Bushings for TOYOTA LAND CRUISER 1998-2007 - 105 Series

## Parts Application Diagrams

### Coil Spring Solid Axle


With Radius Arms And Panhard Rod For Lateral Location

\*As viewed from the Rear of the Vehicle

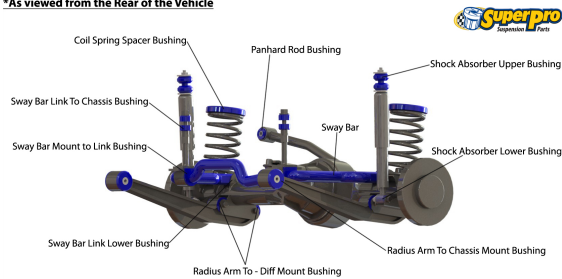

### Coil Spring Solid Axle

With Panhard Rod, Upper And Lower Trailing Arms

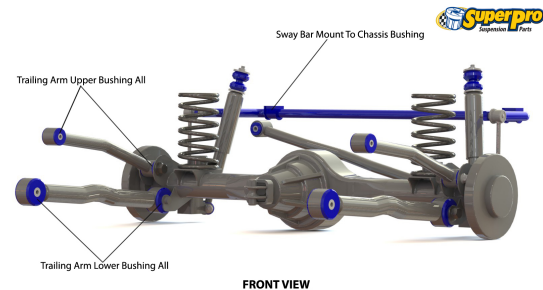

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	30mm Heavy Duty Sway Bar	<a href="#">RC0070F-30</a>	1	Roll Control
Front	Coil Spring Spacer Bush Kit Raises vehicle approximately 30mm	<a href="#">SPF0962K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit Raises vehicle approximately 20mm	<a href="#">SPF1725K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit Raises vehicle approximately 5mm	<a href="#">SPF1726-5K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit Raises vehicle approximately 10mm	<a href="#">SPF1726K</a>	2	SuperPro SPF
Front	Lift Correction Arm Kit Left and Right Arms for Lifted Vehicles with Caster Correction	<a href="#">TRC1016</a>	1	Roll Control
Front	Panhard Rod Bush Kit Remove original shell	<a href="#">SPF0445K</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit Standard Replacement	<a href="#">SPF0396K</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit - Extra Offset Suits 75mm or More Lifted Vehicles	<a href="#">SPF1721XK</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit - Offset Suits 50mm Raised Vehicles	<a href="#">SPF1721K</a>	1	SuperPro SPF
Front	Radius Arm To Chassis Mount Bush Kit	<a href="#">SPF0440K</a>	1	SuperPro SPF
Front	Radius Arm To Chassis Mount Bush Kit with Offset Tube Alignment Correction. Setback Correction Kit. Use this kit to correct pulling issues. Up to 8mm available.	<a href="#">SPF0440XK</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit – Hybrid Version Delivers superior articulation and durability Suits Standard Height vehicles and/or Lifted vehicles fitted with aftermarket Caster increase arms.	<a href="#">TRC0396</a>	1	SuperPro SPF
Front	Shock Absorber Upper & Lower Bush Kit	<a href="#">SPF0740K</a>	2	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF0280K</a>	1	SuperPro SPF
Front	Sway Bar Mount To Link Bush Kit Standard Size	<a href="#">SPF1155-29K</a>	1	SuperPro SPF
Front and Rear	Radius Arms & Panhard Rods Bush Kit Offset bushes to front radius arms	<a href="#">KIT058ADJK</a>	1	Vehicle Kits
Front and Rear	Radius Arms & Panhard Rods Bush Kit Extra Offset bushes to front radius arms	<a href="#">KIT058ADJXK</a>	1	Vehicle Kits
Front and	Radius Arms & Panhard Rods Bush Kit	<a href="#">KIT058K</a>	1	Vehicle Kits

Rear	Standard bushes to front radius arms			
Rear	30mm Heavy Duty Sway Bar	<a href="#">RC0070R-30</a>	1	Roll Control
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-10K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-15K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-20K</a>	2	SuperPro SPF
Rear	Coil Spring Spacer Bush Kit	<a href="#">SPF1724-30K</a>	2	SuperPro SPF
Rear	Panhard Rod Bush Kit	<a href="#">SPF0439K</a>	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit	<a href="#">SPF0078K</a>	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	<a href="#">SPF0740K</a>	1	SuperPro SPF
Rear	Sway Bar Link Kit - Heavy Duty Extra length links to return sway bar to original position on a lifted vehicle.	<a href="#">TRC0039</a>	1	Roll Control
Rear	Sway Bar Link Lower Bush Kit	<a href="#">SPF0280K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit Upper mount, pin top	<a href="#">SPF0903-4K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1155-25K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit	<a href="#">SPF0441K</a>	2	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit	<a href="#">SPF0442K</a>	2	SuperPro SPF