


Suspension Parts & Poly Bushings for VOLVO P 1800 1962-1970 - 1.8-1.8S

Parts Application Diagrams

Generic Diagram

For Illustrative Purposes Only

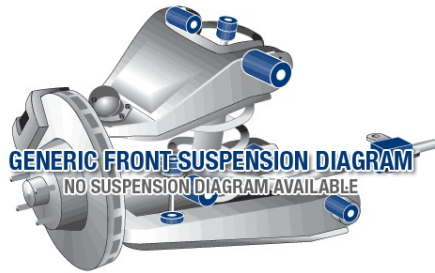

Generic Diagram

For Illustrative Purposes Only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Air Conditioner Alternator Steer Mount Bush Kit Replaces OEM 1378153U	SPF1024K	1	SuperPro SPF
Front	Air Conditioner Alternator Steer Mount Bush Kit Replaces OEM 1378153U	SPF1024SK	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit	SPF1103K	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	SPF2092BK	1	SuperPro SPF
Rear	Panhard Rod Bush Kit	SPF1103AK	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit 58mm OD centre neck of bush, Hour glass type bush	SPF0781K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit 32mm OD shackle type bush	SPF1185K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Parallel type eye	SPF2015K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit 58mm OD centre neck of bush, Hour glass type bush	SPF4775K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Hour glass type, "30mm OD centre neck of bush"	SPF1672K	1	SuperPro SPF
Rear	Trailing Arm Upper Front Bush Kit 32mm OD shackle type bush	SPF1185K	1	SuperPro SPF
Rear	Trailing Arm Upper Rear Bush Kit 32mm OD shackle type bush	SPF1185K	1	SuperPro SPF