


# Suspension Parts & Poly Bushings for SEAT TOLEDO 1991-1999 - 1L

## Parts Application Diagrams

### Macpherson Strut With Lower Control Arm


With Vertical Bushing In Rear Location

\*As viewed from the Rear of the Vehicle

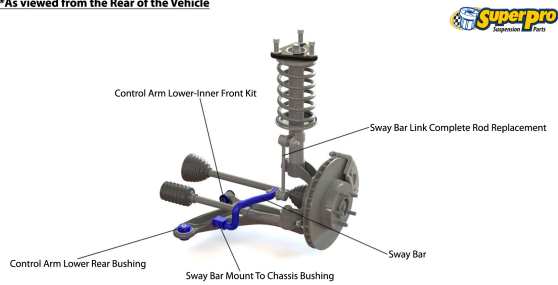

### Double Link

With Trailing Arm And Chapman Strut - Front View

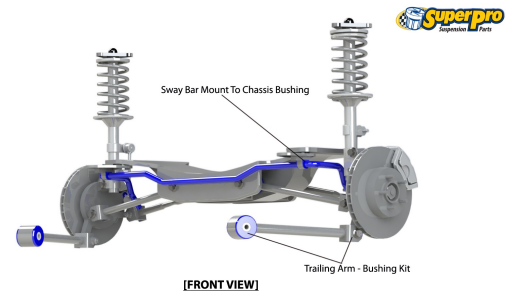

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Replaces OEM Part Number: 357407182	<a href="#">SPF1915K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Replaces OEM NUMBER: 191407181D	<a href="#">SPF1910K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Replaces OEM NUMBER: 191407181D	<a href="#">SPF1912K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-15K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-17K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-18K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-19K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-20K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-21K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-22K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1913-23K</a>	1	SuperPro SPF
Rear	Beam Axle Pivot Bush Kit Replaces OEM Part Number: 191501541	<a href="#">SPF2379K</a>	1	SuperPro SPF