


Suspension Parts & Poly Bushings for HYUNDAI iLOAD 2008-on - TQ

Parts Application Diagrams

Macpherson Strut With Lower Control Arm

With Vertical Bushing In Rear Location

*As viewed from the Rear of the Vehicle

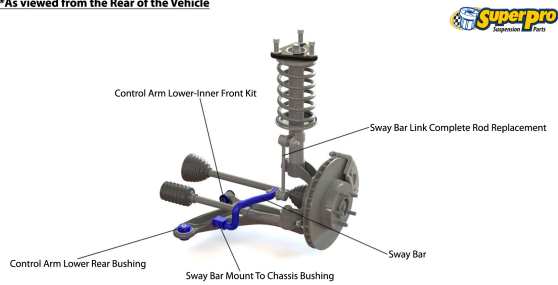

Generic Diagram

For Illustrative Purposes Only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Assembly Kit Left and Right Arms for Standard Replacement and Repair Upgrade	TRC1019	1	Roll Control
Front	Control Arm Lower-Front Bush Kit	SPF3777K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Standard Replacement	SPF3776K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Double Offset Alignment Correction. Caster Adjustment	SPF3809K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Single Offset Alignment Correction. Caster Adjustment	SPF3808K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF2992K	1	SuperPro SPF
Front	Sway Bar Link Cut To Length Link	TRC4007	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC12200	1	Roll Control
Front	Sway Bar Mount Bush Kit	SPF2878-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2878-30K	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit	SPF3779K	1	SuperPro SPF
Rear	Spring Rear Eye & Shackle Bush Kit	SPF3780K	1	SuperPro SPF
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1225	1	Roll Control