


# Suspension Parts & Poly Bushings for VOLVO 740 1984-1990 - 744-745

## Parts Application Diagrams

### Generic Diagram

For Illustrative Purposes Only

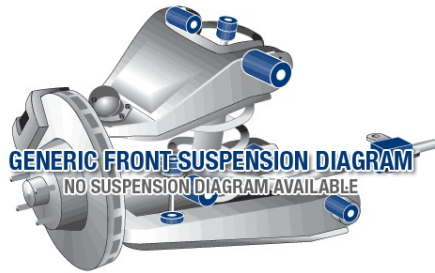

### Generic Diagram

For Illustrative Purposes Only



## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Air Conditioner Alternator Steer Mount Bush Kit OEM 1378153U	<a href="#">SPF1024K</a>	1	SuperPro SPF
Front	Air Conditioner Alternator Steer Mount Bush Kit OEM 1378153U	<a href="#">SPF1024SK</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit 01/1990 to 12/1990 only	<a href="#">SPF2012K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit 01/1990-12/1990 only, Runs rearward from control arm	<a href="#">SPF2013K</a>	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit OEM 6819057U	<a href="#">SPF1023K</a>	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit OEM 6819057U	<a href="#">SPF1023SK</a>	1	SuperPro SPF
Front	Sway Bar Link Upper & Lower Bush Kit	<a href="#">SPF1923K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1025-20K</a>	1	SuperPro SPF
Rear	Differential Support Bracket Mount Bush Kit Solid axle vehicles only, Replaces OEM 1273628	<a href="#">SPF3122K</a>	1	SuperPro SPF
Rear	Differential Torque Arm Bush Kit - Front to suit vehicles with solid axle, 2 kits required to replace bushes in upper & lower arm	<a href="#">SPF3120K</a>	2	SuperPro SPF
Rear	Differential Torque Arm Bush Kit - Rear Solid axle vehicle only, Replaces OEM 1272306 2 x kits needed if replacing bushings in upper & lower arm.	<a href="#">SPF3152K</a>	2	SuperPro SPF
Rear	Differential Torque Arm Bush Kit - Rear Solid axle vehicle only, Replaces OEM 1272306. Kit replaces all bushes in upper & lower arm.	<a href="#">SPF4775K</a>	1	SuperPro SPF
Rear	Frame End Bracket Bush Kit Solid axle vehicle only, Replaces OEM 1229873	<a href="#">SPF3121K</a>	1	SuperPro SPF