


# Suspension Parts & Poly Bushings for TOYOTA SPRINTER 1983-1987 - E86

## Parts Application Diagrams


### Macpherson Strut

With Lower Control Arm And Caster Arm

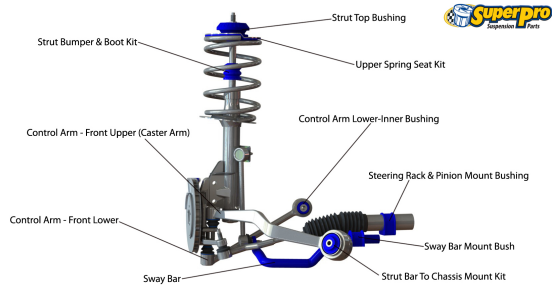

### Coil Spring Solid Axle

With Watts Link And Trailing Arms

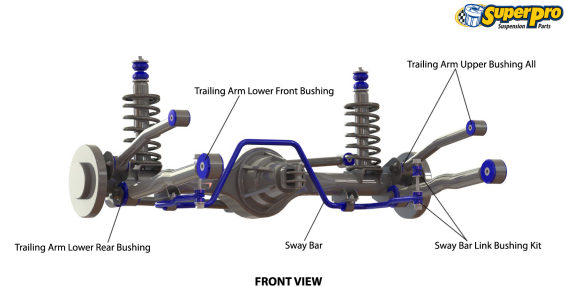

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit Re-use original shell	<a href="#">SPF0509K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	<a href="#">SPF2988K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit Check size, 19mm ID bush & 26mm height bush	<a href="#">SPF0699-19K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit Check size, 20mm ID bush & 26mm height bush	<a href="#">SPF0699-20K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF2092BK</a>	1	SuperPro SPF
Rear	Panhard Rod Bush Kit 35mm OD, 30mm wide bracket, 19.9 ID, cotton reel type	<a href="#">SPF1827K</a>	1	SuperPro SPF
Rear	Panhard Rod To Chassis Mount Bush Kit 32mm OD, 28mm wide bracket, 12 ID, Cotton reel	<a href="#">SPF0427K</a>	1	SuperPro SPF
Rear	Panhard Rod To Diff Mount Bush Kit	<a href="#">SPF0963-20K</a>	1	SuperPro SPF
Rear	Panhard Rod To Diff Mount Bush Kit Tapered cotton reel style bush	<a href="#">SPF0963K</a>	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit	<a href="#">SPF0280K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit	<a href="#">SPF0903-4K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0873-14K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit Performance option	<a href="#">SPF0980-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit	<a href="#">SPF0980K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Performance option	<a href="#">SPF0980-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit	<a href="#">SPF0980K</a>	1	SuperPro SPF