


Suspension Parts & Poly Bushings for SKODA SUPERB 2008-2015 - 3T_ FWD

Parts Application Diagrams

Macpherson Strut

With Separate Control Arm

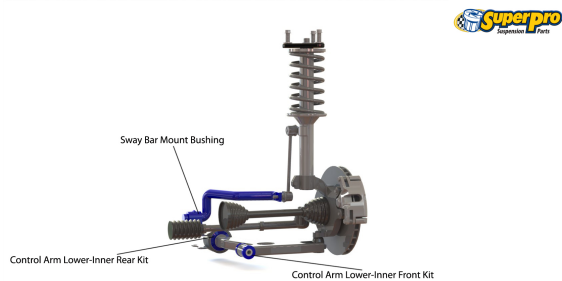

Double Control Arm With Spring & Shock

With Upper Wishbone & Lower Arm



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower Complete Alloy Assembly Left and Right Performance Arm Kit with Anti lift and Caster increase	ALOY0001K	1	Roll Control
Front	Control Arm Lower-Inner Front Bush Kit	SPF3346K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Anti Lift Bracket Mount Kit Left and Right Performance Bracket Kit with Anti lift and Caster increase	ALOY3273-80K	1	Roll Control
Front	Control Arm Lower-Inner Rear Bush & Bracket Kit Standard Replacement for Repair and Repair Upgrade	SPF4952K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Standard Replacement	SPF4176K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Double Offset Double Caster Offset	SPF4178K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Single Offset Single Caster Offset	SPF4177K	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement	TRC4048	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC12265	1	Roll Control
Front	Torque Arm Lower Insert Bush Kit Suits Diesel Engine	SPF2861-70K	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Sports Kit;Suits OEM Part Number: 1KO199867A;Gearbox mount.	SPF2861-80K	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Competition Kit; Suits OEM Part Number: 1KO199867A;Gearbox mount.	SPF2861-90K	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Suits Diesel Engine only. Replaces OEM IKO199867P	SPF3365-70K	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Fast Road Use. OEM Arm Part Number: 1K0199867P	SPF3365-80K	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Competition Kit. Suits OEM Part Number: 1K0199567P. Gearbox mount.	SPF3365-90K	1	SuperPro SPF
Rear	Control Arm & Trailing Arm Bush Kit	KIT5239RK	1	Vehicle Kits

Rear	Control Arm Lower-Front Outer Bush Kit	SPF3351-90K	1	SuperPro SPF
Rear	Control Arm Lower-Front Outer Bush Kit	SPF3351K	1	SuperPro SPF
Rear	Control Arm Lower-Inner Front Bush Kit	SPF3350-90K	1	SuperPro SPF
Rear	Control Arm Lower-Inner Front Bush Kit	SPF3350K	1	SuperPro SPF
Rear	Control Arm Lower-Rear Inner Bush Kit	SPF3352K	1	SuperPro SPF
Rear	Control Arm Lower-Rear Outer Bush Kit	SPF3353K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit	SPF3348K	1	SuperPro SPF
Rear	Control Arm Upper-Outer Bush Kit	SPF3349K	1	SuperPro SPF
Rear	Sway Bar Link Standard Replacement	TRC4050	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1045L	1	Roll Control
Rear	Sway Bar Mount Bush Kit	SPF3355-18K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF3355-19K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF3355-20K	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	SPF3347-70K	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	SPF3347-80K	1	SuperPro SPF