


# Suspension Parts & Poly Bushings for MAZDA 323 1980-1989 - BD, BF

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm

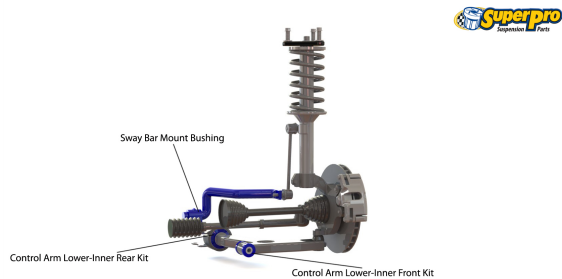

### Double Link

With Trailing Arm And Chapman Strut - Front View

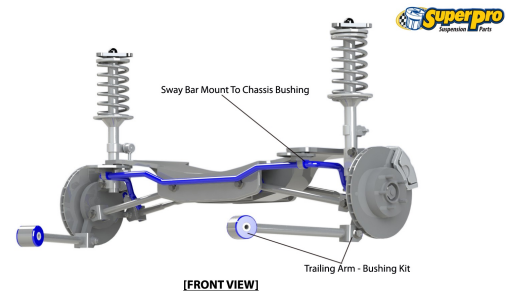

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit BD series 1980 to 1985, Replaces OEM B03734470	<a href="#">SPF0103FK</a>	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit BF Series 1985 to 1989 only	<a href="#">SPF1115K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit PS & DS standard	<a href="#">SPF0103RK</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Alignment Correction	<a href="#">SPF1356K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Alignment Correction for Performance	<a href="#">SPF1357AK</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Alignment Correction	<a href="#">SPF1357K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Manual Steering) RH mount section 37mm x 37mm	<a href="#">SPF0769K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF0306K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-16K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-17K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-20K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-23K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-24K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-26K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-27K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm	<a href="#">SPF0304-28K</a>	1	SuperPro SPF

available				
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-30K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter16,17,20,23,24,26,27,28,30,32mm available	<a href="#">SPF0304-32K</a>	1	SuperPro SPF
Rear	Camber Adjusting Bolt Kit Adds +/- 1.5 Degree Camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	<a href="#">SPF0306K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0305-16K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0305-20K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0305-22K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit 34mm OD bush	<a href="#">SPF1015K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit 44mm Outside diameter bushing.	<a href="#">SPF2744K</a>	1	SuperPro SPF