


Suspension Parts & Poly Bushings for CHEVROLET CORVETTE 1968-1982 - C3

Parts Application Diagrams

Double Wishbone

With Upper And Lower Wishbone Control Arms

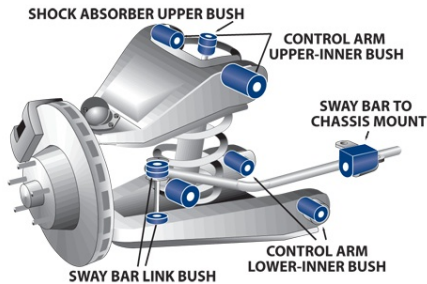

Generic Diagram

For Illustrative Purposes Only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Shock Absorber Upper Bush Kit	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-14K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-19K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-20K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-22K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-24K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 14,19,20,22,24,27,28 available	SPF0248-28K	1	SuperPro SPF
Rear	Camber Adjuster Bush Kit 1972 to 1974 only, Inner & outer bushes	SPF0993K	1	SuperPro SPF
Rear	Differential To Crossmember To Chassis Mount Bush Kit	SPF0416K	1	SuperPro SPF
Rear	Spring Insulator Pad Bush Kit Spring cushion retainers at the ends of each leaf spring	SPF0132K	1	SuperPro SPF
Rear	Strut Rod Bush Kit Must use original crush tube	SPF0285K	1	SuperPro SPF
Rear	Strut Rod Bush Kit	SPF4849K	1	SuperPro SPF