


Suspension Parts & Poly Bushings for PROTON SATRIA 1996-2005 - C9_M

Parts Application Diagrams

Macpherson Strut With Lower Control Arm


With Vertical Bushing In Front Location

*As viewed from the Rear of the Vehicle

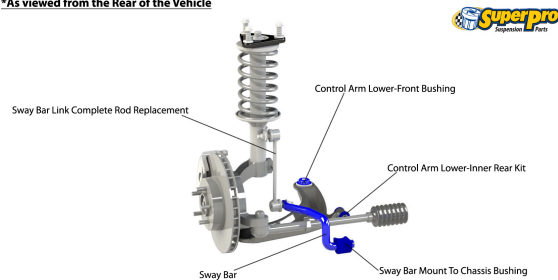

Double Link

With Trailing Arm And Chapman Strut - Front View

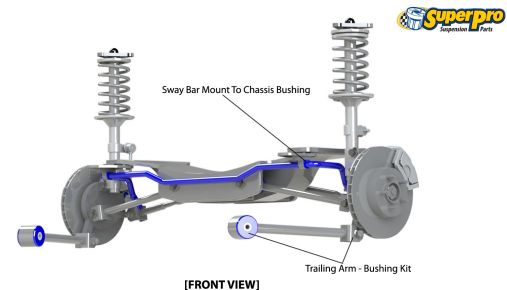

Available SuperPro Parts

| Position | Part Name | Part No. | Qty/Car | Sub Brand |
|----------|---|-----------------------------|---------|--------------|
| Front | Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber | SPF4351-12K | 1 | SuperPro SPF |
| Front | Control Arm Lower-Front Bush Kit | SPF1160K | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Rear Bush Kit Standard replacement | SPF1500K | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Rear Bush Kit Alignment Correction | SPF1502K | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Rear Bush Kit Anti Lift & Caster Increase | SPF1502XK | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction for Performance | SPF1502AK | 1 | SuperPro SPF |
| Front | Control Arm Lower-Inner Rear Bush Kit - Single Offset Alignment Correction | SPF1501K | 1 | SuperPro SPF |
| Front | Steering Rack & Pinion Mount Bush (Power Steering) | SPF1706K | 1 | SuperPro SPF |
| Front | Sway Bar Link Standard Replacement | TRC4057 | 2 | Roll Control |
| Front | Sway Bar Link Bush Kit | SPF2092BK | 1 | SuperPro SPF |
| Front | Sway Bar Mount Bush Kit | SPF1572-22K | 1 | SuperPro SPF |
| Front | Sway Bar Mount Bush Kit | SPF1572-23K | 1 | SuperPro SPF |
| Rear | Control Arm Lower-Inner & Outer Bush Kit | SPF1573K | 1 | SuperPro SPF |
| Rear | Control Arm Upper-Inner Bush Kit Kit includes mounting foot pin | SPF2110K | 1 | SuperPro SPF |
| Rear | Control Arm Upper-Outer Bush Kit | SPF2291K | 1 | SuperPro SPF |
| Rear | Lateral Arm Front-Inner Bush Kit Replaces hyme joint type bush with 40.25mm OD bush | SPF2027K | 1 | SuperPro SPF |
| Rear | Lateral Arm Front-Outer Bush Kit Kit includes mounting foot pin | SPF2110K | 1 | SuperPro SPF |
| Rear | Sway Bar Link Bush Kit | SPF2092BK | 1 | SuperPro SPF |
| Rear | Sway Bar Mount Bush Kit Bar diameter 12,13,15,16,18,19,20,22mm ava,32mm wide | SPF1826-16K | 1 | SuperPro SPF |

| bracket | | | | |
|---------|--|-----------------------------|---|--------------|
| Rear | Sway Bar Mount Bush Kit Bar diameter 12,13,15,16,18,19,20,22mm ava,32mm wide bracket | SPF1826-18K | 1 | SuperPro SPF |
| Rear | Sway Bar Mount Bush Kit Bar diameter 12,13,15,16,18,19,20,22mm ava,32mm wide bracket | SPF1826-22K | 1 | SuperPro SPF |
| Rear | Trailing Arm Lower-Front Bush Kit | SPF1574K | 1 | SuperPro SPF |