

Suspension Parts & Poly Bushings for MITSUBISHI LANCER 1996-2004 - CE

Parts Application Diagrams


Macpherson Strut

With Separate Control Arm



Complex Multi Link

With Trailing Link And Coil Seat

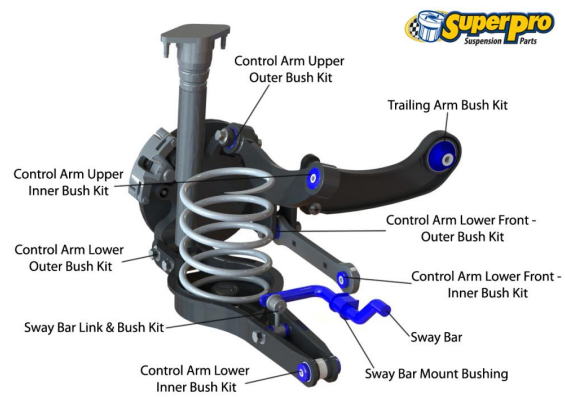

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degree Camber	SPF4351-12K	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit	SPF1160K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Standard replacement	SPF1500K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Alignment Correction	SPF1502K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Anti Lift & Caster Increase	SPF1502XK	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction for Performance	SPF1502AK	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Alignment Correction	SPF1501K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Power Steering)	SPF1706K	1	SuperPro SPF
Front	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Front	Sway Bar Link Standard Replacement	TRC4006	2	Roll Control
Front	Sway Bar Link Bush Kit	SPF2292BK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1572-18K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1572-19K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1572-20K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1572-22K	1	SuperPro SPF
Rear	Control Arm Lower-Inner & Outer Bush Kit	SPF1573K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit Kit includes mounting foot pin	SPF2110K	1	SuperPro SPF
Rear	Control Arm Upper-Outer Bush Kit	SPF2291K	1	SuperPro SPF

Rear	Lateral Arm Front-Inner Bush Kit Replaces hyme joint type bush with 40.25mm OD bush	SPF2027K	1	SuperPro SPF
Rear	Lateral Arm Front-Inner Bush Kit Replaces hyme joint type bush with 36.05mm OD shell	SPF2291K	1	SuperPro SPF
Rear	Lateral Arm Front-Outer Bush Kit Kit includes mounting foot pin	SPF2110K	1	SuperPro SPF
Rear	Sway Bar End Link Bush Kit	SPF2092B-4K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF2292BK	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Bar diameter 12,13,15,16,18,19,20,22mm ava,32mm wide bracket	SPF1826-18K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Bar diameter 12,13,15,16,18,19,20,22mm ava,32mm wide bracket	SPF1826-19K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit	SPF1574K	1	SuperPro SPF