


Suspension Parts & Poly Bushings for MERCEDES-BENZ CLC-CLASS 2008-2011 - CL203

Parts Application Diagrams

Generic Diagram

For Illustrative Purposes Only

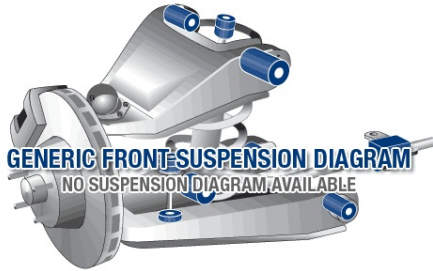

Generic Diagram

For Illustrative Purposes Only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Strut Bar To Chassis Mount Bush Kit standard replacement	SPF2562K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Double Offset	SPF2565K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Single Offset	SPF2564K	1	SuperPro SPF
Front	Sway Bar Link up to Chassis A 436251 - Cut To Length Link	TRC4004	2	Roll Control
Front	Sway Bar Link from Chassis A 436252 - Cut To Length Link	TRC4007	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable up to Chassis A 436251	TRC10200	1	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable from Chassis A 436252	TRC12200	1	Roll Control