


# Suspension Parts & Poly Bushings for BMW 3 1998-2006 - E46

## Parts Application Diagrams

### Macpherson Strut Lower Control Arm


With Vertical Bushing In Front Location

\*As viewed from the Rear of the Vehicle

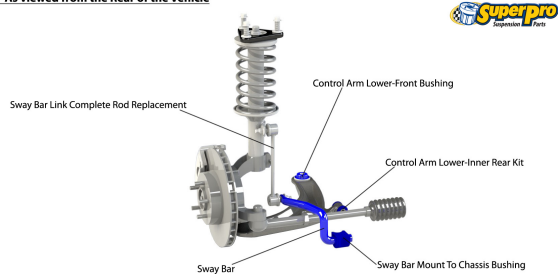

### Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

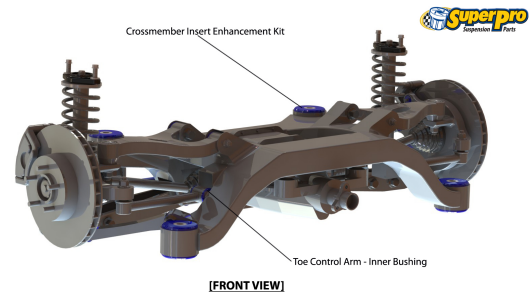

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower Complete Alloy Assembly Left and Right Arm Kit for Standard Replacement or Repair Upgrade	<a href="#">ALOY0046K</a>	1	Roll Control
Front	Control Arm Lower Complete Alloy Assembly Left and Right Performance Arm Kit with Caster increase	<a href="#">ALOY0046XK</a>	1	Roll Control
Front	Control Arm Lower-Inner Rear Bush Kit	<a href="#">SPF2556K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset	<a href="#">SPF2558K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset	<a href="#">SPF2557K</a>	1	SuperPro SPF
Front	Sway Bar Link Cut To Length Link	<a href="#">TRC4004</a>	2	Roll Control
Front	Sway Bar Link Standard Replacement	<a href="#">TRC4074</a>	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC10200</a>	1	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2569-23K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2569-29K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit	<a href="#">SPF2421K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit	<a href="#">SPF2422K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit - Offset	<a href="#">SPF2668K</a>	1	SuperPro SPF
Rear	Differential Pinion Mount Bush Kit	<a href="#">SPF4330K</a>	1	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	<a href="#">SPF1358-10K</a>	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	<a href="#">SPF1358-6K</a>	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	<a href="#">SPF1358-8K</a>	2	SuperPro SPF
Rear	Subframe Mount Bush Kit	<a href="#">SPF4328K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper & Lower Bush Kit	<a href="#">SPF2419K</a>	1	SuperPro SPF

Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0339-14K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit	<a href="#">SPF2146K</a>	1	SuperPro SPF