


Suspension Parts & Poly Bushings for TOYOTA STARLET 1989-1996 - EP82-85

Parts Application Diagrams


Macpherson Strut

With Separate Control Arm

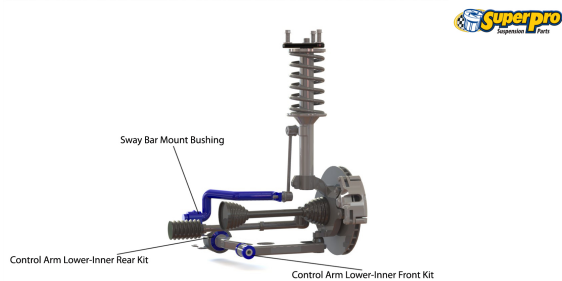

Double Link

With Trailing Arm And Chapman Strut - Front View

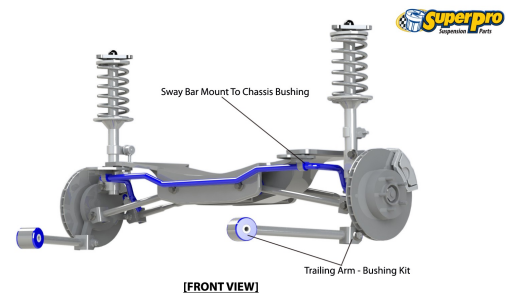

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-15K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Must measure, 34mm OD bush	SPF1888K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Must measure, 31mm OD bush	SPF1905K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Suits 50mm short mounting bracket, OEM 48652-10020, Do not remove original tube from arm	SPF1906K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Suits 35mm long mounting bracket, OEM 48652-46010, Do not remove original tube from arm	SPF2635K	1	SuperPro SPF