

# Suspension Parts & Poly Bushings for TOYOTA STARLET 1996-1999 - EP91

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm



### Double Link

With Trailing Arm And Chapman Strut - Front View

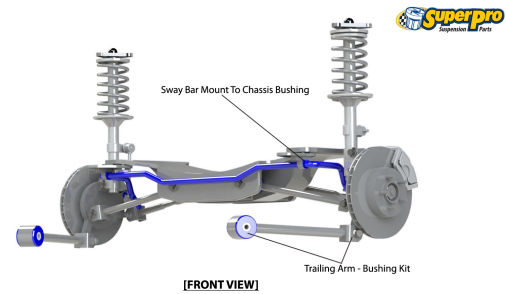

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-15K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Must measure, 34mm OD bush	<a href="#">SPF1888K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Must measure, 31mm OD bush	<a href="#">SPF1905K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Suits 50mm short mounting bracket, OEM 48652-10020, Do not remove original tube from arm	<a href="#">SPF1906K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Suits 35mm long mounting bracket, OEM 48652-46010, Do not remove original tube from arm	<a href="#">SPF2635K</a>	1	SuperPro SPF