


Suspension Parts & Poly Bushings for LAND ROVER DEFENDER 1998-2007 - Chassis YA, TD5

Parts Application Diagrams

Coil Spring Solid Axle


With Radius Arms And Panhard Rod For Lateral Location

*As viewed from the Rear of the Vehicle

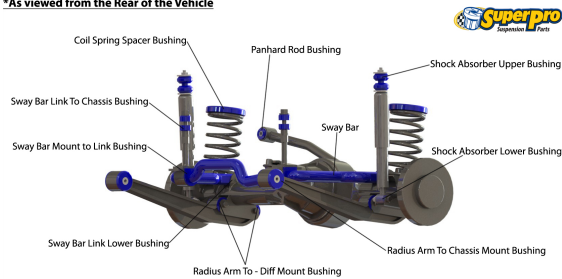

Coil Spring Solid Axle

With Panhard Rod And Lower Trailing Arms

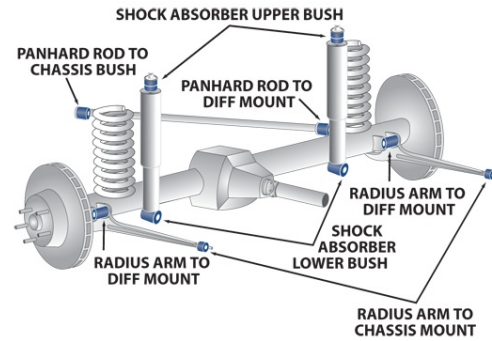

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Panhard Rod Bush Kit Chassis prefix YA on	SPF1803K	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit	SPF0195K	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit	SPF0195SK	1	SuperPro SPF
Front	Radius Arm To Chassis Mount Bush Kit Standard replacement kit	SPF0206K	1	SuperPro SPF
Front	Radius Arm To Chassis Mount Performance Use Performance use only	SPF3632K	1	SuperPro SPF
Front	Radius Arm To Chassis Setback Bush Kit To correct slight pull to left RH drive vehicle Change of aprox 0.5 degree in setback	SPF2717K	1	SuperPro SPF
Front	Radius Arm To Chassis Setback Bush Kit To correct strong pull to left RH drive vehicle Change of aprox 1.0 degree in setback	SPF2718K	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit - Caster Correction Caster Increase	SPF2509K	1	SuperPro SPF
Front	Shock Absorber Upper & Lower Bush Kit Original shock only	SPF0075K	2	SuperPro SPF
Front	Shock Absorber Upper & Lower Bush Kit Aftermarket shock absorbers	SPF1879K	2	SuperPro SPF
Front	Sway Bar Link Bush Kit	SPF0078K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF0666-25K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF0666-26K	1	SuperPro SPF
Front and Rear	Radius Arms & Panhard Rod Bush Kit - Caster Correction	KIT043CADJK	1	Vehicle Kits
Front and Rear	Radius Arms & Panhard Rods Bush Kit	KIT043CK	1	Vehicle Kits
Rear	Radius Arm To Diff Mount Bush Kit	SPF0129K	1	SuperPro SPF
Rear	Radius Arm To Chassis Mount Bush Kit	SPF0323K	1	SuperPro SPF

Rear	Shock Absorber Lower Bush Kit Original shock only	SPF0075K	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit Aftermarket shock absorbers	SPF1879K	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit OE Part Number RNF100090L	SPF2656K	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit Aftermarket shock absorber	SPF0078K	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit Original shock absorbers	SPF0779K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF0078K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0666-23K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0666-24K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit 28mm bracket width, 2 Bolt fixing, replaces OEM # EGP1889, 90 Models Chassis Prefix XA on	SPF1697-18K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Standard size, 38mm bracket width, 4 Bolt fixing, Bar diameter 18,19, 22,25,28.5 & 30mm available	SPF2303-18K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit 38mm bracket width, 4 Bolt fixing, Bar diameter 18 & 19mm ava - replaces OEM NRC5674, 110 & 130 Models Chassis Prefix XA on	SPF2303-19K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit 38mm bracket width, Measure bar diameter 18,19 & 28.5mm available	SPF2303-22K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Upper A arm to chassis bush	SPF0128K	1	SuperPro SPF