


Suspension Parts & Poly Bushings for JAGUAR Mk X 1966-1970 - Mark X

Parts Application Diagrams


Double Wishbone

With Upper And Lower Wishbone Control Arms

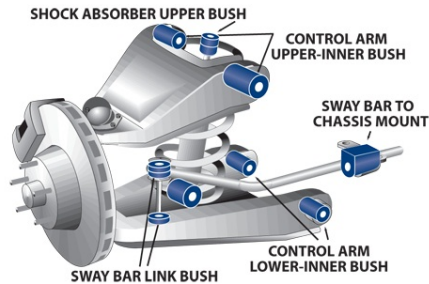

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

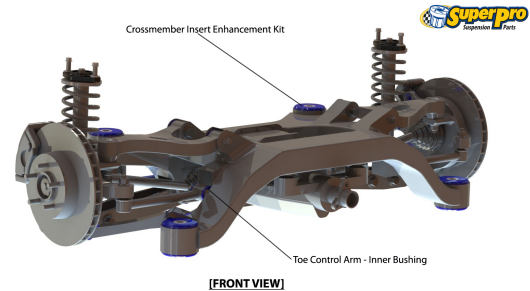

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit Replaces OEM C8673	SPF0286K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Replaces OEM C8672	SPF1199K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-14.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-15.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-16.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-17.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-19K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-20.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-21K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-22K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-24.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp	SPF1133-25.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-14K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-15.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-17.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-19K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-21K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-22K	1	SuperPro SPF

Front	Sway Bar Mount To Link Bush Kit Replaces OEM C10940	SPF1274K	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit Replaces OEM C10996	SPF2092BK	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-14K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-15.5K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-17.5K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-19K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-21K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Suits early C15097 clamp	SPF1137-22K	1	SuperPro SPF
Rear	Sway Bar Mount To Link Bush Kit Replaces OEM C10940	SPF1274K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Replaces OEM C17146, "S type only"	SPF0789K	1	SuperPro SPF