


# Suspension Parts & Poly Bushings for FORD AUSTRALIA ESCORT 1974-1980 - Mk 2

## Parts Application Diagrams

### Macpherson Strut With Lower Control Arm


With Vertical Bushing In Rear Location

\*As viewed from the Rear of the Vehicle

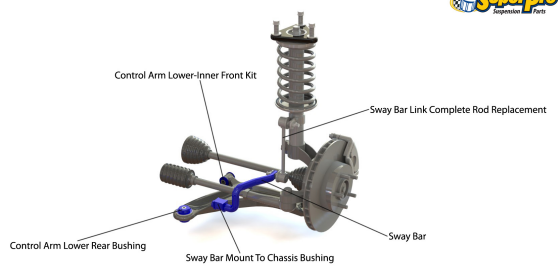

### Leaf Spring Solid Axle

With Limited Lateral Location

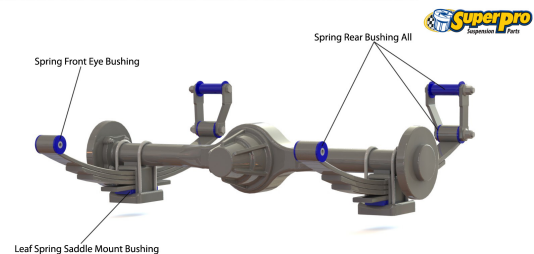

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF0930K</a>	1	SuperPro SPF
Front	Front End Repair Kit	<a href="#">KIT052FK</a>	1	Vehicle Kits
Front	Steering Rack & Pinion Coupling Kit Thickness of coupling 25.5mm	<a href="#">SPF0354K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Coupling Kit Thickness of coupling 10mm	<a href="#">SPF1159K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Manual Steering)	<a href="#">SPF0932K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Repair Kit	<a href="#">KIT026K</a>	1	Vehicle Kits
Front	Steering Rack & Pinion Shaft Guide (Manual Steering)	<a href="#">SPF0931K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Competition use, 69mm wide bush	<a href="#">SPF0312-20K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Competition use, 69mm wide bush	<a href="#">SPF0312-22K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Competition use, 69mm wide bush	<a href="#">SPF0312-24K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2045-19K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2045-20K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2045-22K</a>	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit	<a href="#">SPF0420K</a>	1	SuperPro SPF
Rear	Brake Cable Guide 3/8 Cable	<a href="#">SPF1828K</a>	1	SuperPro SPF
Rear	Leaf Spring Bush Kit 74mm long Tubes in Kit	<a href="#">KIT053RK</a>	1	Vehicle Kits
Rear	Leaf Spring Saddle Mount Bush Kit Spring width 52mm	<a href="#">SPF1979K</a>	1	SuperPro SPF
Rear	Leaf Spring Saddle Mount Bush Kit Single & dual leaf spring 1975 - 1981, 60mm spring width	<a href="#">SPF2112K</a>	1	SuperPro SPF
Rear	Shock Absorber Bush Kit Cotton reel style to suit Spax shock	<a href="#">SPF1860K</a>	1	SuperPro SPF

Rear	Spring Front Eye Bush Kit Bush Size OD 47, ID 19, Length 24. Tube 19x11x65	<a href="#">SPF0293K</a>	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit Bush Size OD 47, ID 19, Length 25. Tube 19x12x74	<a href="#">SPF0935K</a>	1	SuperPro SPF
Rear	Spring Rear Eye Bush Kit Bush Size OD 40mm, ID 19mm, Length 24mm. Tube 19x10x65	<a href="#">SPF0294K</a>	1	SuperPro SPF
Rear	Spring Rear Eye Bush Kit Bush Size OD 40, ID 19, Length 24. Tube 19x10x74	<a href="#">SPF0933K</a>	1	SuperPro SPF
Rear	Spring Shackle Upper Bush Kit 20mm outside diameter	<a href="#">SPF0934K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1426K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF2045-19K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF2045-20K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF2045-22K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Not RS, AVO or MEXICO	<a href="#">SPF2281K</a>	1	SuperPro SPF
Rear	Tramp Rod Front Bush Kit RS1600, RS2000 & Mexico	<a href="#">SPF1168K</a>	1	SuperPro SPF