


Suspension Parts & Poly Bushings for VW GOLF 2002-2005 - Mk 4 Typ 1J1 4motion R32

Parts Application Diagrams


Macpherson Strut

With Separate Control Arm

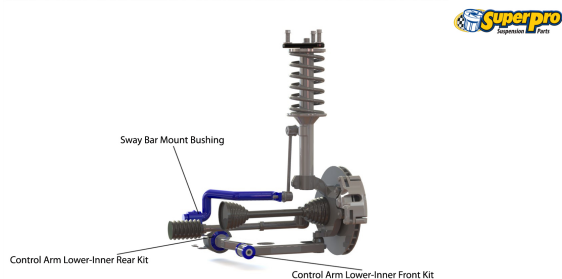

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

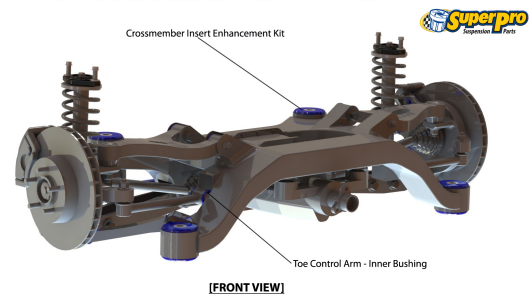

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Front Bush Kit Replaces OEM Part Number: 357407182	SPF1915K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Suited to Cast Arm; Replaces OEM Part Number: 8N0407182A.	SPF3394K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Standard alignment; Press metal arm; Replaces OEM Part Number: 1J0407181.	SPF2082K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Suited to Cast Arm; Replaces OEM Part Number: 8N0407181B.	SPF3395K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction. Press metal arm. Replaces OEM Part Number: 1J0407181.	SPF2084K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Suited to Cast Arm; Replaces OEM Part Number: 8N0407181B; 2 x offset bushings.	SPF3397K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset DS Standard and PS offset alignment settings; Press metal arm; Replaces OEM Part Number: 1J0407181.	SPF2083K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Suited to Cast Arm, 1 x standard and 1 x offset; Replaces OEM Part Number: 8N0407181B.	SPF3396K	1	SuperPro SPF
Front	Engine Support Insert Bush Kit Void filling insert-Low NVH option recommended for Diesel motors; OEM Bracket Part Number: 1J0199851N.	SPF2575K	1	SuperPro SPF
Front	Engine Support Lower-Front Bush Kit Replaces complete original bush; Fits OEM Part Number: 1J0199851AB.	SPF2576K	1	SuperPro SPF
Front	Engine Support Lower-Rear Bush Kit Standard use	SPF2577-80K	1	SuperPro SPF
Front	Engine Support Lower-Rear Bush Kit Competition Applications	SPF2577-90K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit Replaces OEM 1J0422884A	SPF3366K	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Upper & Lower mounts; Replaces OEM Part Number: 1J0411327; Reuse original crush tubes.	SPF2127K	1	SuperPro SPF
Rear	Lateral Arm Lower-Inner Bush Kit Standard; Replaces OEM Part Number 1J0505323.	SPF2540K	1	SuperPro SPF
Rear	Lateral Arm Lower-Inner Bush Kit - Double Offset	SPF2541K	1	SuperPro SPF

Alignment Correction. Camber Adjustable. Replaces OEM Part Number: 1J0505323.

Rear	Lateral Arm Upper-Inner Bush Kit Standard; Replaces OEM Part Number 1J0505323.	SPF2540K	1	SuperPro SPF
Rear	Lateral Arm Upper-Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable. Replaces OEM Part Number: 1J0505323.	SPF2541K	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit Standard & Excess toe adjustment attainable; Replaces OEM Part Number 1J0505171B.	SPF2536K	1	SuperPro SPF