


# Suspension Parts & Poly Bushings for TRIUMPH GT6 1966-1972 - Mk I-II-III

## Parts Application Diagrams

### Generic Diagram

For Illustrative Purposes Only

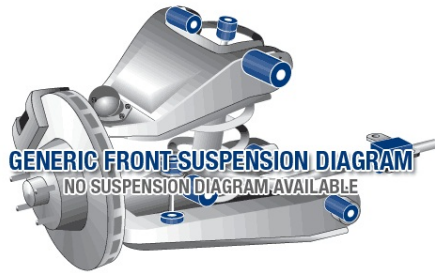

### Generic Diagram

For Illustrative Purposes Only



## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF0478K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF0478K</a>	8	SuperPro SPF
Front	Fan Mount Top Hat Bush Kit Fan mount top hat bushes 6 cylinder	<a href="#">SPF0275K</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	<a href="#">SPF0476K</a>	1	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	<a href="#">SPF0201-70K</a>	1	SuperPro SPF
Front	Steering Coupling Bush Kit Column coupling	<a href="#">SPF1179K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	<a href="#">SPF0941K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit Ball and cup, backing washers	<a href="#">SPF1171K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Eyelet end only, 17mm wide eyelet	<a href="#">SPF2040K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Eyelet end only, 22mm wide eyelet	<a href="#">SPF2041K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit late models	<a href="#">SPF0755-22-90K</a>	1	SuperPro SPF
Front	Trunnion Bush Kit Front trunnion bushes	<a href="#">SPF1321K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit Mk 2, GT6 & Vitesse Rotoflex, 12.7mm ID tube	<a href="#">SPF0808AK</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit Mk 2, GT6 & Vitesse Rotoflex, 12mm ID tube	<a href="#">SPF0808K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Lower	<a href="#">SPF0645K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Upper	<a href="#">SPF0646K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Rear diff casing bush	<a href="#">SPF2048K</a>	1	SuperPro SPF
Rear	Leaf Spring Pad Bush Kit Pivot pad Spitfire 4/1500, GT6 Mk3, swing spring type	<a href="#">SPF0819K</a>	1	SuperPro SPF

Rear	Radius Arm Bush Kit Mk 2 GT6 & Vitesse Rotoflex	<a href="#">SPF0476K</a>	1	SuperPro SPF
Rear	Radius Arm Bush Kit Non Rotoflex	<a href="#">SPF0478K</a>	1	SuperPro SPF
Rear	Shock Absorber Bush Kit Hour glass style	<a href="#">SPF0718-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Front Bush Kit GT6	<a href="#">SPF2103K</a>	1	SuperPro SPF
Rear	Transverse Leaf Spring Eye Bush Kit Must remove original shell	<a href="#">SPF2042K</a>	1	SuperPro SPF
Rear	Trunnion Bush Kit	<a href="#">SPF1850K</a>	1	SuperPro SPF
Rear	Trunnion Bush Kit Rotoflex only GT6	<a href="#">SPF1851K</a>	1	SuperPro SPF