


Suspension Parts & Poly Bushings for JAGUAR Mk II 1955-1967 - Mk1 - Mk2 Sedan

Parts Application Diagrams

Double Wishbone


With Upper And Lower Arm With Drive Shaft

*As viewed from the Front of the Vehicle

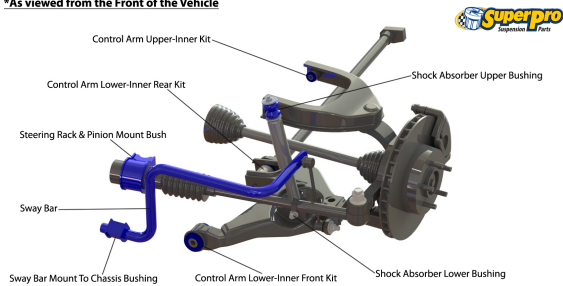

Leaf Spring Solid Axle

With Limited Lateral Location

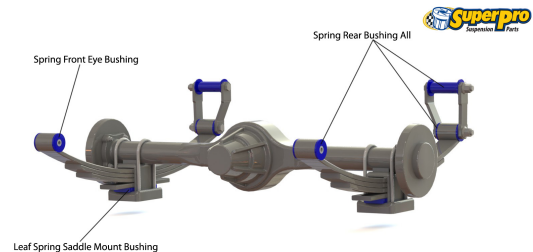

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit Replaces OEM C8673	SPF0286K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Replaces OEM C8672	SPF1199K	1	SuperPro SPF
Front	Drag Link Pivot Bush Kit	SPF1847K	1	SuperPro SPF
Front	Engine Steady Mount Bush Kit Replaces OEM C10940	SPF1274-1K	1	SuperPro SPF
Front	Radiator Support Mount Bush Kit Replaces OEM 8975	SPF0809K	2	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp, measure bar diameter	SPF1133-24.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Suits late C32929 clamp, measure bar diameter	SPF1133-25.5K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit OEM C14983, Suits early C15097 clamp	SPF1137-21K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit OEM C14983, Suits early C15097 clamp	SPF1137-22K	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit Replaces OEM C10996	SPF2092BK	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Replaces OEM C17146, S type only	SPF0789K	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Replaces OEM C8949, S type, Re-use Original tube	SPF0760K	1	SuperPro SPF