

Suspension Parts & Poly Bushings for VW SCIROCCO 1974-1992 - MK 1 & 2 Typ 53, 53B

Parts Application Diagrams


Macpherson Strut

With Separate Control Arm



Double Link

With Trailing Arm And Chapman Strut - Front View

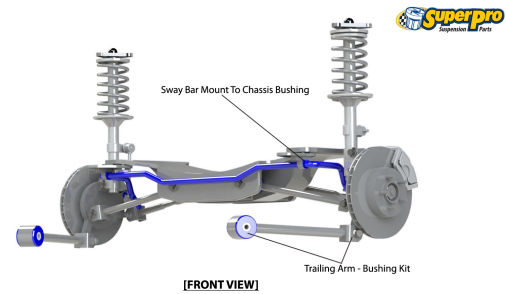

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Front Bush Kit Replaces OEM 171407182D	SPF0647K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Replaces OEM 171407181A	SPF0648K	1	SuperPro SPF
Front	Engine Steady Mount Bush Kit Replaces OEM 171199339	SPF0527K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Manual Steering) Replaces OEM 171419883/884	SPF1932K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 15,17 & 21mm available, Replaces OEM 171411313	SPF0382-15K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 15,17 & 21mm available, Replaces OEM 171411313	SPF0382-17K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 15,17 & 21mm available, Replaces OEM 171411313	SPF0382-21K	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit	SPF1934-15K	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit	SPF1934-17K	1	SuperPro SPF
Front	Sway Bar To Lower Control Arm Bush Kit	SPF1934-21K	1	SuperPro SPF
Rear	Beam Axle Pivot Bush Kit Replaces OEM 171501537B	SPF1555K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-18K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-20K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-22K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-23K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-24K	1	SuperPro SPF
Rear	Sway Bar Inner Beam Mount Bush Kit	SPF0364-25K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-15K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-18K	1	SuperPro SPF

Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-20K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-22K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-23K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-24K	1	SuperPro SPF
Rear	Sway Bar Outer Beam Mount Bush Kit	SPF0363-25K	1	SuperPro SPF