


# Suspension Parts & Poly Bushings for VW RABBIT 2005-2009 - MK5

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm

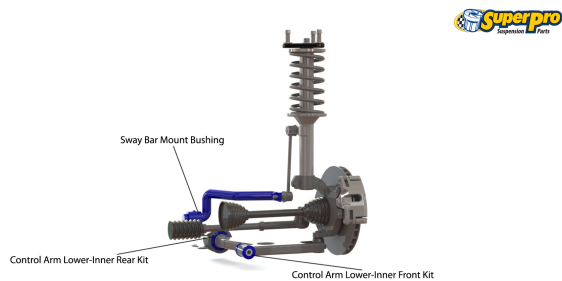

### Double Control Arm With Spring & Shock

With Upper Wishbone & Lower Arm

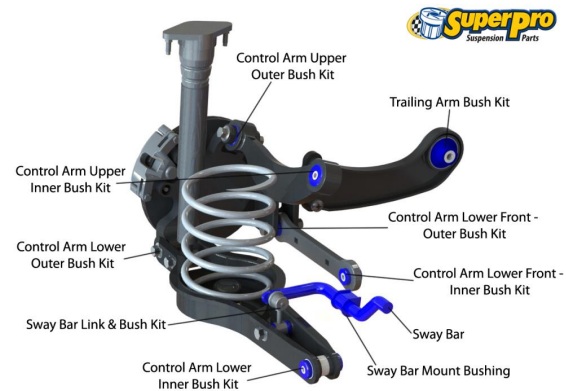

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Ball Joint - Camber Adjustable	<a href="#">TRC0003</a>	1	Roll Control
Front	Control Arm Lower Complete Alloy Assembly Left and Right Performance Arm Kit with Anti lift and Caster increase	<a href="#">ALOY0001K</a>	1	Roll Control
Front	Control Arm Lower-Inner Front Bush Kit Replaces OEM 1K0407182	<a href="#">SPF3346K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Anti Lift Bracket Mount Kit Left and Right Performance Bracket Kit with Anti lift and Caster increase	<a href="#">ALOY3273-80K</a>	1	Roll Control
Front	Control Arm Lower-Inner Rear Anti Lift Bracket Mount Kit Left and Right High Performance Bracket Kit with Anti lift and Caster increase	<a href="#">ALOY3273-90K</a>	1	Roll Control
Front	Control Arm Lower-Inner Rear Bush & Bracket Kit Standard Replacement for Repair and Repair Upgrade	<a href="#">SPF4952K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Pull Left Correction Kit	<a href="#">SPF3272K</a>	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Sports Kit;Suits OEM Part Number: 1K0199867A;Gearbox mount.	<a href="#">SPF2861-80K</a>	1	SuperPro SPF
Front	Torque Arm Lower Insert Bush Kit Competition Kit; Suits OEM Part Number: 1K0199867A;Gearbox mount.	<a href="#">SPF2861-90K</a>	1	SuperPro SPF
Rear	Control Arm & Trailing Arm Bush Kit	<a href="#">KIT5239RK</a>	1	Vehicle Kits
Rear	Control Arm Lower-Front Outer Bush Kit	<a href="#">SPF3351K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Front Bush Kit	<a href="#">SPF3350K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Inner Bush Kit	<a href="#">SPF3352K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Outer Bush Kit	<a href="#">SPF3353K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit	<a href="#">SPF3348K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Outer Bush Kit	<a href="#">SPF3349K</a>	1	SuperPro SPF

Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3355-18K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3355-19K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3355-20K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	<a href="#">SPF3347-70K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	<a href="#">SPF3347-80K</a>	1	SuperPro SPF