


# Suspension Parts & Poly Bushings for TOYOTA CRESSIDA 1981-1985 - MX62

## Parts Application Diagrams

### Generic Diagram

For Illustrative Purposes Only

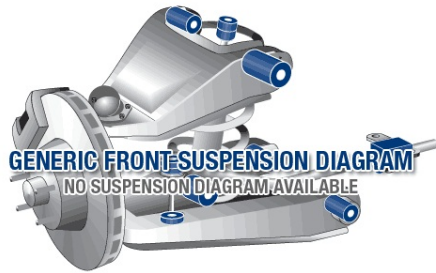

### Generic Diagram

For Illustrative Purposes Only



## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit Re-use original shell	<a href="#">SPF0509K</a>	1	SuperPro SPF
Front	Idler Arm Bush Kit	<a href="#">SPF1476K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0152K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF0903K</a>	1	SuperPro SPF
Rear	Panhard Rod To Chassis Mount Bush Kit	<a href="#">SPF0427K</a>	1	SuperPro SPF
Rear	Panhard Rod To Diff Mount Bush Kit	<a href="#">SPF0963K</a>	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	<a href="#">SPF2755SK</a>	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit	<a href="#">SPF0827K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit	<a href="#">SPF0018K</a>	1	SuperPro SPF