


# Suspension Parts & Poly Bushings for NISSAN PULSAR 1990-1996 - N14

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm

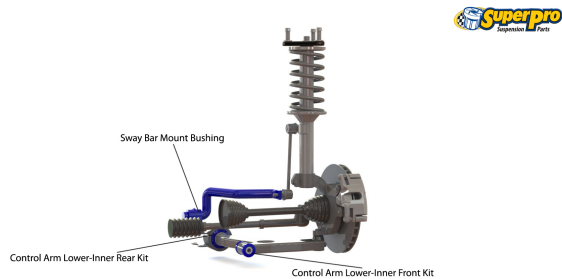

### Double Link

With Trailing Arm And Chapman Strut - Front View

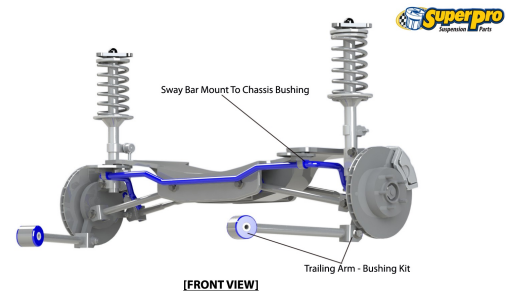

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit	<a href="#">SPF1341K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit GTiR Import model	<a href="#">SPF0864K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Standard setting	<a href="#">SPF1338K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Alignment Correction	<a href="#">SPF1339K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit 2 x Offset bushings, Increase positive caster both sides	<a href="#">SPF1340AK</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit 2 x Offset bushings, PS increased DS decrease caster	<a href="#">SPF1340K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Power Steering) Not GTiR models	<a href="#">SPF1834K</a>	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement	<a href="#">TRC4037</a>	2	Roll Control
Front	Sway Bar Link Lower Bush Kit	<a href="#">SPF2092B-4K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 16,22,24,25,26,27,28mm available	<a href="#">SPF1135-24K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 16,22,24,25,26,27,28mm available	<a href="#">SPF1135-25K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 16,22,24,25,26,27,28mm available	<a href="#">SPF1135-26K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 16,22,24,25,26,27,28mm available	<a href="#">SPF1135-27K</a>	1	SuperPro SPF
Rear	Camber Adjusting Bolt Kit Adds +/- 1.5 Degree Camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner & Outer Bush Kit Includes 40mm long crush tubes	<a href="#">SPF0862K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit	<a href="#">SPF0903-4K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1192-16K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit Not suited to GTiR models	<a href="#">SPF0835-4K</a>	1	SuperPro SPF
Rear	Trailing Arm Rear Bush Kit	<a href="#">SPF0691-2K</a>	1	SuperPro SPF

Not suited to GTiR models