


Suspension Parts & Poly Bushings for MITSUBISHI PAJERO 1991-2000 - NH, NJ, NK, NL

Parts Application Diagrams

Double Wishbone


With Upper And Lower Arm With Drive Shaft

*As viewed from the Front of the Vehicle

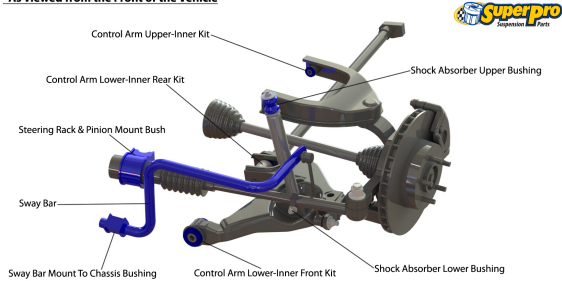

Coil Spring Solid Axle

With Panhard Rod And Lower Trailing Arms

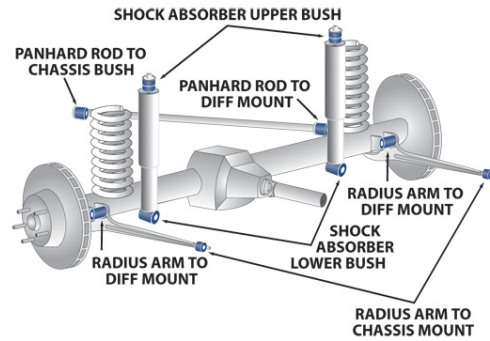

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Upper-Inner Bush Kit	SPF4981K	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit	SPF2301K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit	SPF2932K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit	SPF1740K	1	SuperPro SPF
Front	Idler Arm Bush Kit NH to NJ	SPF0956K	1	SuperPro SPF
Front	Sway Bar Link To Chassis Bush Kit	SPF2092B-4K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1493-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1493-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1493-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1493-29K	1	SuperPro SPF
Rear	Leaf Spring Bush Kit	KIT072HK	1	Vehicle Kits
Rear	Leaf Spring Bush Kit	KIT072K	1	Vehicle Kits
Rear	Panhard Rod Bush Kit	SPF1245K	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit Leaf spring model with 18mm pin	SPF0244HK	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit Leaf spring model with 18mm pin	SPF0244K	1	SuperPro SPF
Rear	Spring Rear Eye Bush Kit	SPF0192HK	1	SuperPro SPF
Rear	Spring Rear Eye Bush Kit	SPF0192K	1	SuperPro SPF
Rear	Spring Shackle Upper Bush Kit	SPF0187HK	1	SuperPro SPF

Rear	Spring Shackle Upper Bush Kit	SPF0187K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF2092BK	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-26K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-27K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-28K	1	SuperPro SPF
Rear	Trailing Arm To Chassis Mount Bush Kit Has factory locating washers welded to chassis bracket	SPF1244K	1	SuperPro SPF
Rear	Trailing Arm To Chassis Mount Bush Kit No factory locating washers - locating spigot is part of bush	SPF1456K	1	SuperPro SPF
Rear	Trailing Arm To Diff Mount Bush Kit 65mm OD bush, check size	SPF1243K	1	SuperPro SPF
Rear	Trailing Arm To Diff Mount Bush Kit 60mm OD bush, check size	SPF1455K	1	SuperPro SPF