


# Suspension Parts & Poly Bushings for MITSUBISHI PAJERO 2000-2006 - NM, NP

## Parts Application Diagrams

### Double Control Arm


With Upper And Lower Control Arms, Spring, Shock Assembly And Drive Shaft

\*As viewed from the Front of the Vehicle

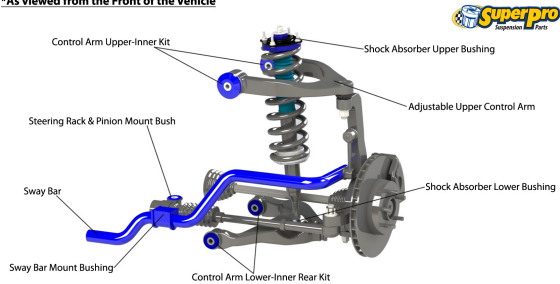

### Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

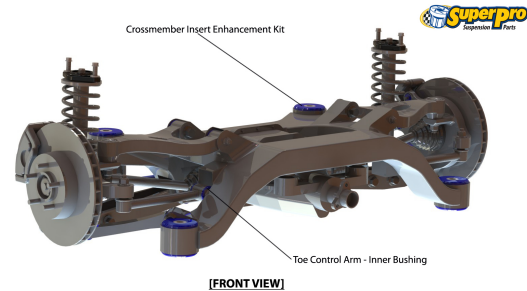

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Front & Rear Bush Kit Remove original rubber bushing and outer shell before fitment	<a href="#">SPF2774K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Remove original rubber bushing and outer shell before fitment	<a href="#">SPF2774FK</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Remove original rubber bushing and outer shell before fitment	<a href="#">SPF2775K</a>	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Re-use original shell	<a href="#">SPF1956K</a>	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Does not require the original Shell to be Re-used	<a href="#">SPF3792K</a>	1	SuperPro SPF
Front	ReadyStrut Top Caps	<a href="#">RS007</a>	2	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	<a href="#">SPF2940PK</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit 40mm OD	<a href="#">SPF2940PK</a>	1	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	<a href="#">SPF4646K</a>	1	SuperPro SPF
Front	Spring Insulator Pad Bush Kit	<a href="#">SPF2994K</a>	1	SuperPro SPF
Front	Strut Top Spacer Kit Raises vehicle approximately 10-12mm	<a href="#">TRC008-6</a>	1	Roll Control
Front	Sway Bar Link LHS - Standard Replacement	<a href="#">TRC4062L</a>	1	Roll Control
Front	Sway Bar Link RHS - Standard Replacement	<a href="#">TRC4062R</a>	1	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC1225</a>	1	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1493-29K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1493-30K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1493-31K</a>	1	SuperPro SPF
Front	Swaybar to Chassis Bush Kit	<a href="#">SPF1493-34K</a>	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit	<a href="#">KIT206K</a>	1	Vehicle Kits

Rear	Control Arm Lower-Inner & Outer Bush Kit Heavy Duty Option	<a href="#">SPF2056HK</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner & Outer Bush Kit Standard Replacement	<a href="#">SPF2056K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit Camber Adjustable	<a href="#">SPF4669K</a>	1	SuperPro SPF
Rear	Control Arm Upper Inner Front Bush Kit	<a href="#">SPF4891K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Front Bush Kit	<a href="#">SPF4891K</a>	1	SuperPro SPF
Rear	Differential Front Support Mount Kit Both ends of aluminium brace arm at front of diff	<a href="#">SPF2739K</a>	1	SuperPro SPF
Rear	Differential to Subframe Mount Bush Kit	<a href="#">SPF2750K</a>	1	SuperPro SPF
Rear	Differential to Subframe Mount Bush Kit - SupePro Hybrid	<a href="#">TRC2750</a>	1	Roll Control
Rear	Sway Bar Link Cut To Length Link	<a href="#">TRC4007</a>	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC1245</a>	1	Roll Control
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0343-23K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0343-24K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF0343-25K</a>	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit Heavy Duty Option	<a href="#">SPF2057HK</a>	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit Standard Replacement	<a href="#">SPF2057K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit	<a href="#">SPF2777K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Heavy Duty Option-Remove original outer shell before fitment of SuperPro bushing	<a href="#">SPF2055HK</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Standard Replacement-Remove original outer shell before fitment of SuperPro bushing	<a href="#">SPF2055K</a>	1	SuperPro SPF