


Suspension Parts & Poly Bushings for MITSUBISHI PAJERO 2006-on - NS, NT, NW

Parts Application Diagrams

Double Control Arm


With Upper And Lower Control Arms, Spring, Shock Assembly And Drive Shaft

*As viewed from the Front of the Vehicle

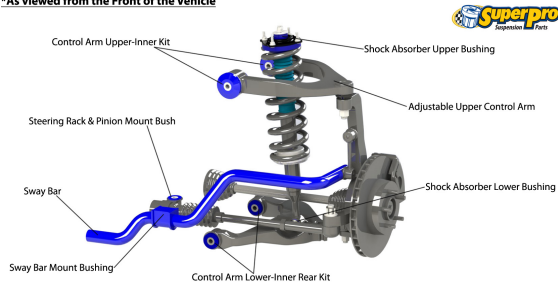

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

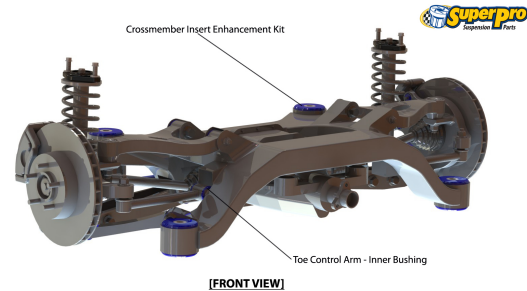

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Front & Rear Bush Kit Remove original rubber bushing and outer shell before fitment.	SPF2774K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Remove original rubber bushing and outer shell before fitment.	SPF2774FK	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Remove original rubber bushing and outer shell before fitment.	SPF2775K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Re-use original shell	SPF1956K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Does not require the original Shell to be Re-used	SPF3792K	1	SuperPro SPF
Front	ReadyStrut Top Caps	RS007	2	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	SPF4646K	1	SuperPro SPF
Front	Strut Top Spacer Kit Raises vehicle approximately 10-12mm	TRC008-6	1	Roll Control
Front	Sway Bar Mount Bush Kit	SPF1493-30K	1	SuperPro SPF
Front	Swaybar to Chassis Bush Kit	SPF1493-34K	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit	KIT206K	1	Vehicle Kits
Rear	Control Arm Lower-Inner & Outer Bush Kit Heavy Duty Option	SPF2056HK	1	SuperPro SPF
Rear	Control Arm Lower-Inner & Outer Bush Kit Standard Replacement	SPF2056K	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit Camber Adjustable	SPF4669K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit Remove original shell from arm	SPF2811K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Front Bush Kit	SPF4891K	1	SuperPro SPF
Rear	Differential Front Support Mount Kit Both ends of aluminium brace arm at front of diff	SPF2739K	1	SuperPro SPF
Rear	Differential to Subframe Mount Bush Kit	SPF2750K	1	SuperPro SPF
Rear	Differential to Subframe Mount Bush Kit - SuperPro Hybrid	TRC2750	1	Roll Control

Rear	Sway Bar Link Cut To Length Link	TRC4007	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1245	1	Roll Control
Rear	Sway Bar Mount Bush Kit	SPF0343-18K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-20K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-23K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-24K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-25K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-26K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-27K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0343-28K	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit Heavy Duty Option	SPF2057HK	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit Standard Replacement	SPF2057K	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit	SPF2777K	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Heavy Duty Option-Remove original outer shell before fitment of SuperPro bushing	SPF2055HK	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Standard Replacement-Remove original outer shell before fitment of SuperPro bushing	SPF2055K	1	SuperPro SPF