


# Suspension Parts & Poly Bushings for NISSAN DATSUN 1600 1968-1972 - P510

## Parts Application Diagrams


### Generic Diagram

For Illustrative Purposes Only

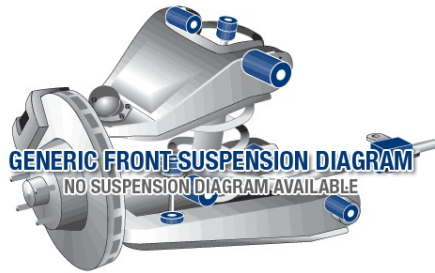

### Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

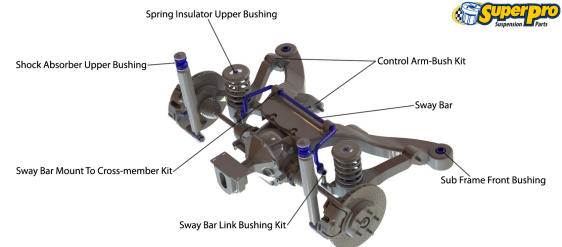

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Bump Stop Bush Kit	<a href="#">SPF0104K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit Fits 1969 - 1972, Not early model tapered bush	<a href="#">SPF0564-95K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit Fits 1969 - 1972, Not early model tapered bush	<a href="#">SPF0564K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit Early tapered style bush	<a href="#">SPF2641K</a>	1	SuperPro SPF
Front	Idler Arm Bush Kit Parallel bore	<a href="#">SPF0563K</a>	1	SuperPro SPF
Front	Idler Arm Bush Kit	<a href="#">SPF1003K</a>	1	SuperPro SPF
Front	Idler Arm Bush Kit Tapered bore on housing	<a href="#">SPF2005K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0927-20.5K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0927K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF2092BK</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 18,20,21,22mm available	<a href="#">SPF0569-21K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 18,20,21,22mm available	<a href="#">SPF0569-22K</a>	1	SuperPro SPF
Rear	Control Arm Inner Bush Kit	<a href="#">SPF0561K</a>	1	SuperPro SPF
Rear	Crossmember To Chassis Mount Bush Kit	<a href="#">SPF0270K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Moustache bar, 50mm OD Bush Heavy Duty	<a href="#">SPF0246-95K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Moustache bar, 50mm OD Bush	<a href="#">SPF0246K</a>	1	SuperPro SPF
Rear	Differential Mount Bush Kit Moustache bar, 40mm OD Bush	<a href="#">SPF2033K</a>	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	<a href="#">SPF2755LK</a>	1	SuperPro SPF

