


Suspension Parts & Poly Bushings for NISSAN PATHFINDER 2005-2013 - R51

Parts Application Diagrams

Double Control Arm


With Upper And Lower Control Arms, Spring, Shock Assembly And Drive Shaft

*As viewed from the Front of the Vehicle

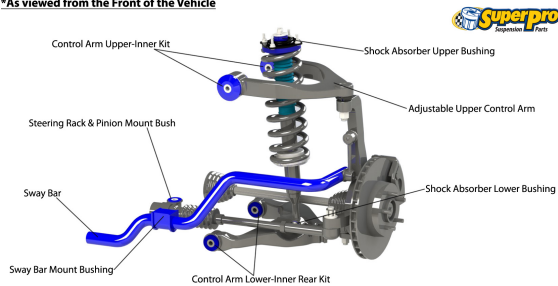

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

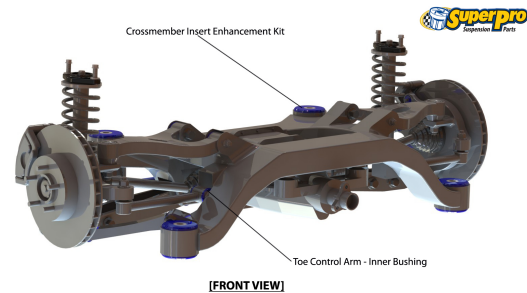

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Ball Joint Upper Boot Kit Kit includes Boot and Cir Clips for one Control Arm	TRC7000RK	2	Roll Control
Front	Control Arm Lower-Inner Bush Kit Standard replacement	SPF3023K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit Standard replacement	SPF4785K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit - Double Offset 4 x Offset bushings & 4 x standard tubes	SPF3024K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit - Double Offset 4 x offset bushings & 4 x Standard tubes	SPF4786K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit - Extra Double Offset 4 x offset bushings & 4 x offset tubes, for use where max adjustment is needed	SPF3024XK	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit - Extra Double Offset 4 x offset bushings & 4 x offset tubes, for use where max adjustment is needed	SPF4786XK	1	SuperPro SPF
Front	Control Arm Upper Complete Assembly - Adjustable Left and Right Arms for Lifted Vehicles with Caster and Camber Correction	TRC540	1	Roll Control
Front	Control Arm Upper-Inner Bush Kit Standard replacement	SPF3022K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Standard replacement	SPF4784K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit - Double Offset Offset tubes to aid in camber adjustment in raised vehicles.	SPF3022XK	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit - Offset Offset tubes to aid in camber adjustment in raised vehicles	SPF4784XK	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF3028K	1	SuperPro SPF
Front	Strut Top Spacer Kit Raises vehicle approximately 10-12mm	TRC008-6	1	Roll Control
Front	Sway Bar Link LHS - Standard Replacement	TRC4030L	1	Roll Control
Front	Sway Bar Link RHS - Standard Replacement	TRC4030R	1	Roll Control
Front	Sway Bar Mount Bush Kit	SPF3025-34.3K	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit Camber Adjustable Front and Rear Kit - does not suit US models	KIT205K	1	Vehicle Kits

Rear	Control Arm Lower-Inner Bush Kit Standard replacement.	SPF3974K	1	SuperPro SPF
Rear	Control Arm Lower-Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable	SPF3975K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit Standard replacement - does not suit US models. For US models please use SPF4587K.	SPF3976K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable - does not suit US models. For US models please use SPF4586K.	SPF3977K	1	SuperPro SPF
Rear	Differential Mount Bush Kit Rear Bushing Mounted in Subframe	SPF5133K	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit Alignment Correction. Toe Adjustment - does not suit US models	SPF3966K	1	SuperPro SPF