


Suspension Parts & Poly Bushings for NISSAN SILVIA 1988-1996 - S13

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Separate Radius Rod

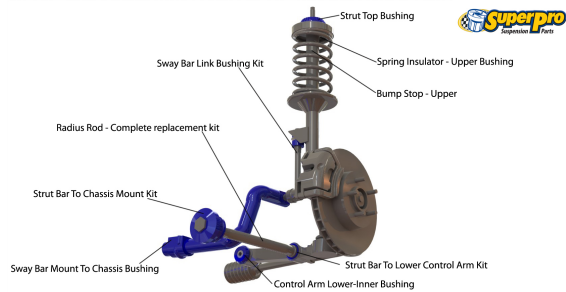

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

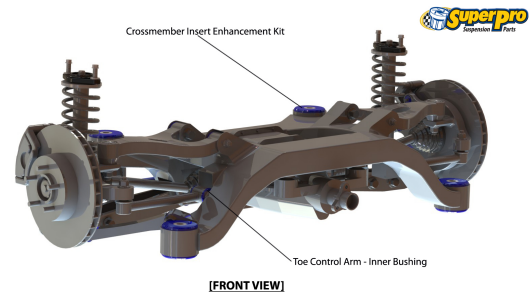

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 3 Position Blade Adjustable Sway Bar Suits Vehicles with CR18 Engine only	RC0084FZ-27	1	Roll Control
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-12K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit Stepped shell 34mm to 36mm outside diameter	SPF1009K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF1483K	1	SuperPro SPF
Front	Steering Coupling Bush Kit Manual & Power steering	SPF0624K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Power Steering) Replaces RH side OEM 54444-61U00, & LH side OEM 54445-35F00	SPF2825K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit Standard, 69.5mm long tube, Bracket width 40mm	SPF1202K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Double Offset Alignment Correction. 69.5mm long tube & Bracket width of 40mm	SPF1202AK	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	SPF2092B-4K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1636-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1636-27K	1	SuperPro SPF
Front	Swaybar to Chassis Bush Kit	SPF1636-28K	1	SuperPro SPF
Front and Rear	Alignment Bush Kit	KIT116K	1	Vehicle Kits
Front and Rear	Alignment Bush Kit SPF1202AK x 1, SPF1869K x 2	KIT123K	1	Vehicle Kits
Front and Rear	Enhancement Bush Kit	KIT124K	1	Vehicle Kits
Front and Rear	Enhancement Bush Kit	KIT125K	1	Vehicle Kits
Rear	Control Arm Lower-Inner Bush Kit 45mm crush tube	SPF1639K	1	SuperPro SPF
Rear	Control Arm Upper-Inner & Outer Bush Kit 40mm crush tube	SPF1638K	2	SuperPro SPF
Rear	Control Arm Upper-Inner or Outer Bush Kit - Double Offset	SPF1869K	2	SuperPro SPF

	Alignment Correction. Inner & outer camber adjustment with 40mm long offset tube			
Rear	Control Arm Upper-Inner or Outer Bush Kit - Double Offset Alignment Correction. Inner & outer camber adjustment with 40mm long offset tube	SPF1869K	1	SuperPro SPF
Rear	Crossmember Insert Enhancement Kit Inserts into existing bushes. Supplement washers, outer cross member, top & bottom.	SPF2687K	1	SuperPro SPF
Rear	Differential To Crossmember To Chassis Mount Bush Kit	SPF3775K	1	SuperPro SPF
Rear	Radius Arm Upper-Inner/Outer Bush Kit 40mm crush tube	SPF1638K	1	SuperPro SPF
Rear	Subframe Mount Bush Kit	SPF3774K	1	SuperPro SPF
Rear	Subframe Traction Bush Kit	KIT201K	1	Vehicle Kits
Rear	Sway Bar Link Bush Kit	SPF2667K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1485-20K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1485-21K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1485-22K	1	SuperPro SPF
Rear	Toe Control Arm Bush Kit Front wheel steering only	SPF1638K	1	SuperPro SPF