

# Suspension Parts & Poly Bushings for VW BORA 1998-2005 - 1J\_ 4motion

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm



### Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

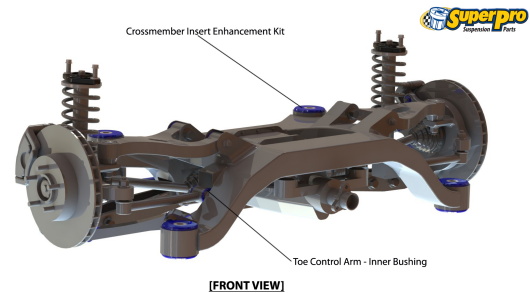

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Front Bush Kit Replaces OEM Part Number: 357407182	<a href="#">SPF1915K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Standard alignment; Press metal arm; Replaces OEM Part Number: 1J0407181.	<a href="#">SPF2082K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction. Press metal arm. Replaces OEM Part Number: 1J0407181.	<a href="#">SPF2084K</a>	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Alignment Correction. Press metal arm. Replaces OEM Part Number: 1J0407181.	<a href="#">SPF2083K</a>	1	SuperPro SPF
Front	Engine Support Insert Bush Kit OEM Bracket Part Number: 1J0199851N	<a href="#">SPF2575K</a>	1	SuperPro SPF
Front	Engine Support Lower-Front Bush Kit Replaces complete original bush; Fits OEM Part Number: 1J0199851AB.	<a href="#">SPF2576K</a>	1	SuperPro SPF
Front	Engine Support Lower-Rear Bush Kit Sports & street application	<a href="#">SPF2577-80K</a>	1	SuperPro SPF
Front	Engine Support Lower-Rear Bush Kit Competition application	<a href="#">SPF2577-90K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit Replaces OEM 1J0422884A	<a href="#">SPF3366K</a>	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement	<a href="#">TRC4063</a>	2	Roll Control
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2593-21K</a>	1	SuperPro SPF
Rear	Lateral Arm Lower-Inner Bush Kit Standard, replaces OEM 1J0505323	<a href="#">SPF2540K</a>	1	SuperPro SPF
Rear	Lateral Arm Lower-Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable. Replaces OEM Part Number: 1J0505323.	<a href="#">SPF2541K</a>	1	SuperPro SPF
Rear	Lateral Arm Upper-Inner Bush Kit Standard, replaces OEM 1J0505323	<a href="#">SPF2540K</a>	1	SuperPro SPF
Rear	Lateral Arm Upper-Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable. Replaces OEM Part Number: 1J0505323.	<a href="#">SPF2541K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Standard Size	<a href="#">SPF2592-15K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit AWD vehicles, Standard & Excess toe adjustment attainable,	<a href="#">SPF2536K</a>	1	SuperPro SPF

replaces OEM 1J0505171B