


# Suspension Parts & Poly Bushings for INFINITI G35 2003-2006 - V35

## Parts Application Diagrams


### Macpherson Strut

With Separate Control Arm

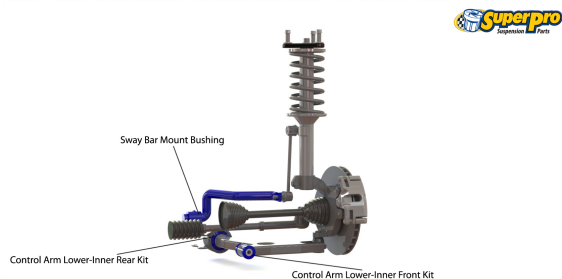

### Double Link

With Trailing Arm And Chapman Strut - Front View

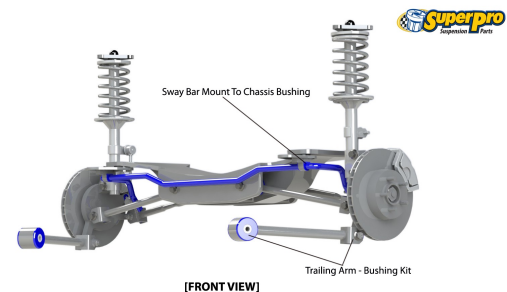

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF3298K</a>	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Standard replacement	<a href="#">SPF3296K</a>	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit - Double Offset Offset tubes for +/- camber adjustment. Note vehicles with wide wheels may need guard rolled to prevent scrubbing.	<a href="#">SPF3297K</a>	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit Bushing located in control arm	<a href="#">SPF3299K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	<a href="#">SPF2715-50K</a>	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	<a href="#">SPF2715-52K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit Standard replacement, Remove original shell for fitment of this kit	<a href="#">SPF2847K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Double Offset Alignment Correction. Remove OE shell for fitment	<a href="#">SPF2849K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Single Offset Alignment Correction	<a href="#">SPF2848K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2359-30K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2359-32K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF2359-34K</a>	1	SuperPro SPF
Rear	Camber & Toe Adjusting Kit	<a href="#">KIT148K</a>	1	Vehicle Kits
Rear	Control Arm Lower-Front Inner Bush Kit Standard replacement	<a href="#">SPF3316K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Front Inner Bush Kit - Double Offset Alignment Correction. Camber Adjustable	<a href="#">SPF3317K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Front Outer Bush Kit Bushing mounted in hub	<a href="#">SPF3318K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Inner Rear Bush Kit - Double Offset Offset tube in kit for +/- toe adjustment	<a href="#">SPF3321K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Inner Bush Kit Standard replacement	<a href="#">SPF3320K</a>	1	SuperPro SPF
Rear	Control Arm Lower-Rear Outer Bush Kit Bushing mounted in hub	<a href="#">SPF3322K</a>	1	SuperPro SPF

Rear	Control Arm Upper-Inner Bush Kit Standard replacement	<a href="#">SPF3313K</a>	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit - Double Offset Note: Suggest fitting KIT148K before fitting this kit for camber issues.Offset tubes for adjustment in this kit	<a href="#">SPF3313XK</a>	1	SuperPro SPF
Rear	Differential Rear Mount Bush Kit	<a href="#">SPF3856K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3312-20K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF3312-21K</a>	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	<a href="#">SPF3314K</a>	1	SuperPro SPF
Rear	Trailing Arm Rear Bush Kit Bushing mounted in hub	<a href="#">SPF3315K</a>	1	SuperPro SPF