


Suspension Parts & Poly Bushings for NISSAN SKYLINE 2001-on - V35 RWD

Parts Application Diagrams


Double Control Arm With Strut & Coil

With Upper A-Arm, Lower Control Arm And Radius Arm

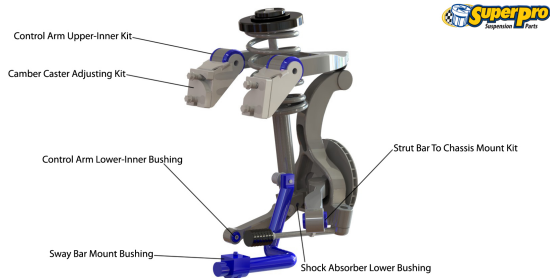

Complex Multi Link With Active Control

With Upper And Lower Control Arms, Trailing And Toe Control Arms

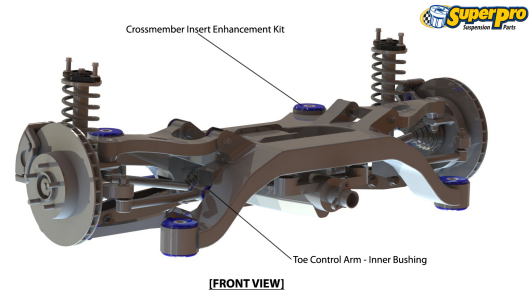

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Control Arm Lower-Inner Bush Kit	SPF3298K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit Standard replacement	SPF3296K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit - Double Offset Offset tubes for +/- camber adjustment. Note vehicles with wide wheels may need guard rolled to prevent scrubbing.	SPF3297K	1	SuperPro SPF
Front	Front End Repair Kit	KIT161K	1	Vehicle Kits
Front	Shock Absorber Lower Bush Kit Bushing located in control arm	SPF3299K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF2715-50K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF2715-52K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit Standard replacement, Remove original shell for fitment of this kit	SPF2847K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Double Offset Alignment Correction. Remove OE shell for fitment	SPF2849K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit - Single Offset Alignment Correction	SPF2848K	1	SuperPro SPF
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1245	1	Roll Control
Front	Sway Bar Mount Bush Kit	SPF2359-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2359-30K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2359-32K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2359-34K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2359-35K	1	SuperPro SPF
Rear	Camber & Toe Adjusting Kit	KIT148K	1	Vehicle Kits
Rear	Control Arm Lower-Front Inner Bush Kit Standard replacement	SPF3316K	1	SuperPro SPF
Rear	Control Arm Lower-Front Inner Bush Kit - Double Offset	SPF3317K	1	SuperPro SPF

Alignment Correction. Camber Adjustable				
Rear	Control Arm Lower-Front Outer Bush Kit Bushings mounted in hub	SPF3318K	1	SuperPro SPF
Rear	Control Arm Lower-Inner Rear Bush Kit - Double Offset Offset tube in kit for +/- toe adjustment	SPF3321K	1	SuperPro SPF
Rear	Control Arm Lower-Rear Inner Bush Kit Standard replacement	SPF3320K	1	SuperPro SPF
Rear	Control Arm Lower-Rear Outer Bush Kit Bushings mounted in hub	SPF3322K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit Standard replacement	SPF3313K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Bush Kit - Double Offset Note: Suggest fitting KIT148K before fitting this kit for camber issues. Offset tubes for adjustment in this kit	SPF3313XK	1	SuperPro SPF
Rear	Differential Mount Bush Kit Contains Pinion & Rear Differential Mounts	SPF3849K	1	SuperPro SPF
Rear	Differential Rear Mount Bush Kit	SPF3856K	1	SuperPro SPF
Rear	Rear End Repair Kit	KIT150K	1	Vehicle Kits
Rear	Shock Absorber Lower Bush Kit	SPF3322K	1	SuperPro SPF
Rear	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1085	1	Roll Control
Rear	Sway Bar Mount Bush Kit	SPF3312-20K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF3312-21K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF3312-22K	1	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	SPF3314K	1	SuperPro SPF
Rear	Trailing Arm Rear Bush Kit Bushings mounted in hub	SPF3315K	1	SuperPro SPF