


Suspension Parts & Poly Bushings for HOLDEN COMMODORE 2006-2013 - VE Sedan, Wagon & Ute

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Caster Arm

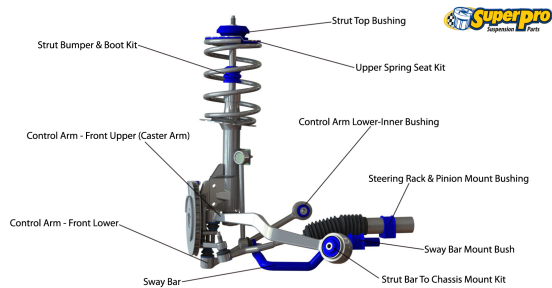

Complex IRS For Rwd

With Upper And Lower Control Arms, Trailing And Toe Control Arms

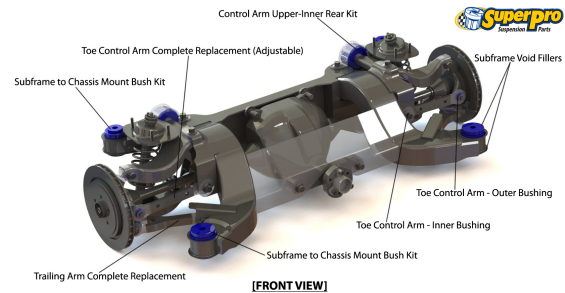

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty Non Adjustable Sway Bar FRONT SOLID 27MM SWAY BAR, H/DUTY SINGLE HOLE REPLACEMENT	RC0001F-27	1	Roll Control
Front	29mm Heavy Duty Hollow 2 Position Blade Adjustable Sway Bar	RC0001FHZ-29	1	Roll Control
Front	30mm Heavy Duty 4 Position Blade Adjustable Sway Bar	RC0001FZ-30	1	Roll Control
Front	30mm Heavy Duty Hollow 2 Position Blade Adjustable Sway Bar	RC0001FHZ-30	1	Roll Control
Front	30mm Sway Bar and Heavy Duty Adjustable Sway Bar Link Kit	RC0001FHZ-30KIT	1	Roll Control
Front	Alignment Bush Kit - Front End	KIT154K	1	Vehicle Kits
Front	Bump Stop Bush Kit	SPF2883K	1	SuperPro SPF
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Caster Arm Complete Assembly Left and Right Replacement Arms for Repair or Performance Upgrade	TRC1001	1	Roll Control
Front	Caster Arm Complete Assembly Replacement Arms for Repair and Repair Upgrade with PolyElast Bushings	TRC1001PE	1	Roll Control
Front	Control Arm Lower Complete Assembly Left and Right Replacement Arms for Repair or Performance Upgrade	TRC1000	1	Roll Control
Front	Control Arm Lower Complete Assembly Replacement Arms for Repair and Repair Upgrade with PolyElast Bushings	TRC1000PE	1	Roll Control
Front	Control Arm Lower-Inner Bush Kit	SPF2862K	1	SuperPro SPF
Front	Engine Mount Kit Complete set of Engine Mounts to suit V8 Engine	TRC2000	1	SuperPro SPF
Front	Spring Seat Upper Bush Kit	SPF4091K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF2864K	1	SuperPro SPF
Front	Strut Bar Caster Plates	SPF2859K	1	SuperPro SPF

Front	Strut Bar To Chassis Mount Bush Kit	SPF2858K	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Brace does not fit V6 SIDI engine 2010- on	FPB-006	1	Roll Control
Front	Strut Top & Bearing	SPF1590AK	1	SuperPro SPF
Front	Strut Top & Bearing	SPF1590BK	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement - LHS	TRC4005L	1	Roll Control
Front	Sway Bar Link Standard Replacement - RHS	TRC4005R	1	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10245	1	Roll Control
Front	Sway Bar Mount Bush Kit	SPF2863-24K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2863-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2863-27K	1	SuperPro SPF
Front and Rear	30mm Front 2 Position Adjustable & 22mm Rear 3 Position Adjustable Hollow Sway Bar Kit	RC0001H-KIT	1	Roll Control
Front and Rear	Enhancement Bush Kit	KIT175K	1	Vehicle Kits
Front and Rear	Performance Sway Bar Upgrade Kit 30mm Front 2 Point Adjustable and 22mm Rear 3 Point Adjustable Sway Bars	RCCOM001KIT	1	Roll Control
Rear	22mm Heavy Duty 3 Position Blade Adjustable Sway Bar	RC0001RZ-22	1	Roll Control
Rear	22mm Heavy Duty Hollow 3 Position Blade Adjustable Sway Bar	RC0001RHZ-22	1	Roll Control
Rear	22mm Sway Bar and Heavy Duty Adjustable Sway Bar Link Kit	RC0001RHZ-22KIT	1	Roll Control
Rear	24mm Heavy Duty 3 Position Blade Adjustable Sway Bar	RC0001RZ-24	1	Roll Control
Rear	Bump Stop Bush Kit	SPF2883K	1	SuperPro SPF
Rear	Control Arm Complete Rear - Adjustable Kit Complete Replacement Arm Kit with SuperPro Bushings, Content: TRC1002 x 1, TRC1003 x 1, TRC1004 x 1	TRC1002KIT	1	Roll Control
Rear	Control Arm Lower Complete Adjustable Arm Kit Complete Replacement Arm	TRC1002	1	Roll Control
Rear	Control Arm Lower-Inner Bush Kit Rear Arm, Bushing located in arm	SPF2865K	1	SuperPro SPF
Rear	Control Arm Lower-Outer Bush Kit Rear Arm, Bushing located in knuckle	SPF2866K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Rear Bush Kit	SPF2870K	1	SuperPro SPF
Rear	Control Arm Upper-Inner Rear Bush Kit Suits Alloy Arm & Bracket	SPF4286K	1	SuperPro SPF
Rear	Differential to Subframe Mount Bush Kit	SPF2869K	1	SuperPro SPF
Rear	Enhancement Bush Kit - Rear Traction	KIT176K	1	Vehicle Kits
Rear	Spring Seat Bush Kit Upper	SPF3247K	1	SuperPro SPF
Rear	Subframe to Chassis Mount Bush Kit	SPF3918K	1	SuperPro SPF
Rear	Subframe to Chassis Spacer on Front Mount Bush Kit	SPF2873K	1	SuperPro SPF
Rear	Subframe Void Filler Bush Kit Bottom	SPF2871K	1	SuperPro SPF
Rear	Subframe Void Filler Bush Kit Top	SPF2872K	1	SuperPro SPF

Rear	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Rear	Sway Bar Link Standard Replacement	TRC4021	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC1045	1	Roll Control
Rear	Sway Bar Mount Bush Kit	SPF0613-22.5K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0613-22K	1	SuperPro SPF
Rear	Toe Control Arm Assembly - Adjustable Complete Replacement Arm	TRC1003	1	Roll Control
Rear	Toe Control Arm Inner & Outer Bush Kit	SPF3237K	1	SuperPro SPF
Rear	Toe Control Arm Inner Bush Kit	SPF2868K	1	SuperPro SPF
Rear	Trailing Arm Bush Kit	SPF2867K	1	SuperPro SPF
Rear	Trailing Arm Heavy Duty Complete Assembly Complete Replacement Arm	TRC1004	1	Roll Control
Rear	Upper Outer Control Arm Bush Kit Hyme Joint Replacement	SPF5236K	1	SuperPro SPF