


# Suspension Parts & Poly Bushings for HOLDEN CALAIS 1988-1993 - VN-VP Sedan & Wagon

## Parts Application Diagrams


### Macpherson Strut

With Lower Control Arm And Separate Radius Rod

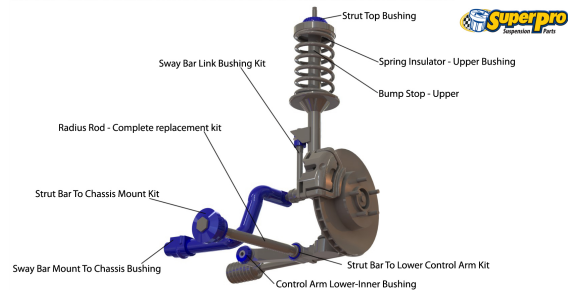

### Coil Spring Solid Axle

With Panhard Rod, Upper And Lower Trailing Arms

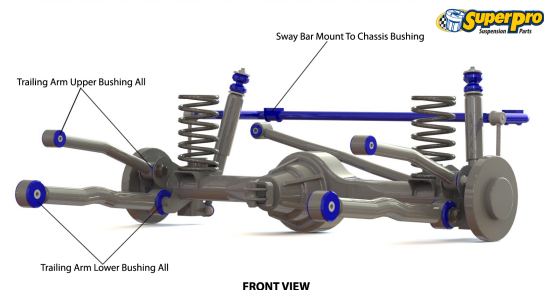

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 4 Position Blade Adjustable Sway Bar	<a href="#">SHF16A</a>	1	Roll Control
Front	Alignment Bush Kit - Front End	<a href="#">KIT151K</a>	1	Vehicle Kits
Front	Bump Stop Bush Kit - Upper SuperPro Polyurethane Heavy Duty front strut bump stop	<a href="#">SPF0189K</a>	1	SuperPro SPF
Front	Bump Stop Kit	<a href="#">SPF1833BK</a>	1	SuperPro SPF
Front	Complete Front End Bush Kit	<a href="#">KIT044FK</a>	1	Vehicle Kits
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF0251K</a>	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	<a href="#">SPF2498K</a>	1	SuperPro SPF
Front	Strut Bar Fixed +2.0° Strut bar only, use SPF0240K,SPF0756K	<a href="#">SPF1630K</a>	1	SuperPro SPF
Front	Strut Bar Fixed +2.0° Strut bar only, use SPF0240K,SP0F756K	<a href="#">SPF1630K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0240-90K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0240K</a>	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	<a href="#">SPF0756K</a>	1	SuperPro SPF
Front	Strut Brace V8 Engines only	<a href="#">FPB-001</a>	1	Roll Control
Front	Strut Top Bush Kit	<a href="#">SPF0986K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF987K	<a href="#">SPF0994K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Replacement bushings for SPF0987K	<a href="#">SPF2755LK</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Original sway bar	<a href="#">SPF2755SK</a>	2	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF2755SK</a>	2	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "after-market" swaybar	<a href="#">SPF0967K</a>	1	SuperPro SPF

Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "original" swaybar	<a href="#">SPF0968K</a>	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty link rod & bushing replacement, fits from original swaybar to strut leg	<a href="#">SPF0987K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-27K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-28K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-30K</a>	1	SuperPro SPF
Rear	20mm Heavy Duty Non Adjustable Sway Bar Suits Solid Axle only	<a href="#">SHR16</a>	1	Roll Control
Rear	22mm Heavy Duty 4 Point Adjustable Sway Bar Kit suits vehicles with factory fitted sway bars	<a href="#">SHR16A</a>	1	Roll Control
Rear	Bump Stop Bush Kit - Shortened Suit lowered suspension "Use with OE Foam bump stop"	<a href="#">SPF0601K</a>	1	SuperPro SPF
Rear	Bump Stop Bush Kit - Shortened Suit Extra lowered suspension "Remove OE Foam"	<a href="#">SPF0601SLK</a>	1	SuperPro SPF
Rear	Control Arm Bush Kit IRS Independent Rear Suspension	<a href="#">SPF0611K</a>	2	SuperPro SPF
Rear	Crossmember Supplement Washers Bush Kit	<a href="#">SPF0840K</a>	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit Rear IRS Suspension	<a href="#">SPF0877FK</a>	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	<a href="#">SPF0877K</a>	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	<a href="#">SPF0877TK</a>	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	<a href="#">SPF3211K</a>	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	<a href="#">SPF0877ZK</a>	1	SuperPro SPF
Rear	Panhard Rod on car adjustable	<a href="#">TRC1107</a>	1	Roll Control
Rear	Panhard Rod Bush Kit Solid axle rear	<a href="#">SPF0030K</a>	1	SuperPro SPF
Rear	Panhard Rod Bush Kit Fits "Fulcrum Formula" adjustable panhard rod only	<a href="#">SPF1051K</a>	1	SuperPro SPF
Rear	Rear End Repair Kit Standard Replacement	<a href="#">KIT061RK</a>	1	Vehicle Kits
Rear	Shock Absorber Upper Bush Kit Solid axle rear	<a href="#">SPF2755LK</a>	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm	<a href="#">SPF0385-10K</a>	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 6mm	<a href="#">SPF0385-5K</a>	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle, standard height vehicle	<a href="#">SPF0385K</a>	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	<a href="#">SPF1358-10K</a>	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	<a href="#">SPF1358-6K</a>	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	<a href="#">SPF1358-8K</a>	2	SuperPro SPF
Rear	Subframe Front Bush Kit Standard Replacement Kit	<a href="#">SPF3267K</a>	1	SuperPro SPF
Rear	Subframe Front Bush Kit Competition/Race Kit	<a href="#">SPF3367K</a>	1	SuperPro SPF
Rear	Sway Bar Link and Bush Kit	<a href="#">SPF2966BK</a>	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit Solid axle rear	<a href="#">SPF2092K</a>	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit IRS Independent Rear Suspension	<a href="#">SPF0513-4K</a>	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit IRS Independent Rear Suspension	<a href="#">SPF1943K</a>	1	SuperPro SPF

Rear	Sway Bar Mount Bush Kit Solid axle rear	<a href="#">SPF0589-21K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Solid axle rear	<a href="#">SPF0589-22K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit	<a href="#">SPF0016K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit	<a href="#">SPF0017K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	<a href="#">SPF0255-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	<a href="#">SPF0255K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-70K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-90K</a>	1	SuperPro SPF