


# Suspension Parts & Poly Bushings for HOLDEN COMMODORE 1993-2000 - VR-VS Ute

## Parts Application Diagrams


### Macpherson Strut

With Lower Control Arm And Separate Radius Rod

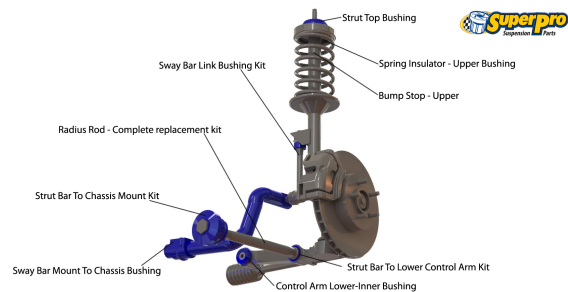

### Coil Spring Solid Axle

With Panhard Rod And Trailing Arms

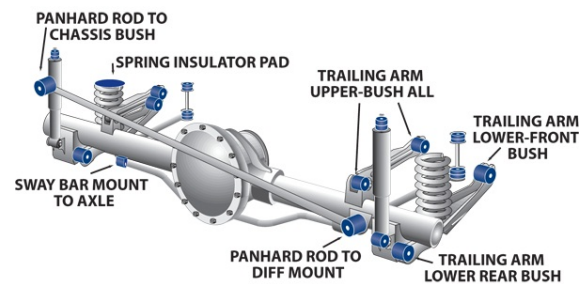

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty Non Adjustable Sway Bar	<a href="#">SHF17</a>	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	<a href="#">SHF17A</a>	1	Roll Control
Front	30mm Heavy Duty Non Adjustable Sway Bar	<a href="#">SHF17C</a>	1	Roll Control
Front	Alignment Bush Kit - Front End	<a href="#">KIT152K</a>	1	Vehicle Kits
Front	Bump Stop Kit	<a href="#">SPF1833BK</a>	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	<a href="#">SPF2365-10K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	<a href="#">SPF2365-5K</a>	2	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	<a href="#">SPF0842K</a>	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	<a href="#">SPF2498K</a>	1	SuperPro SPF
Front	Strut Bar Fixed +2.0° Strut bar only, use SPF0240K,SPF0756K	<a href="#">SPF1630K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0240-90K</a>	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	<a href="#">SPF0240K</a>	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	<a href="#">SPF0756CK</a>	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	<a href="#">SPF4960K</a>	2	SuperPro SPF
Front	Strut Brace	<a href="#">FPB-003</a>	1	Roll Control
Front	Strut Top & Bearing	<a href="#">SPF1590AK</a>	1	SuperPro SPF
Front	Strut Top & Bearing	<a href="#">SPF1590BK</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF987K	<a href="#">SPF0994K</a>	1	SuperPro SPF

Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF0987K	<a href="#">SPF0994K</a>	1	SuperPro SPF
Front	Sway Bar Link to Strut Kit H/Duty link rod replacement & bushing kit	<a href="#">SPF0987K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-27K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-28K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1453-30K</a>	1	SuperPro SPF
Rear	22mm Heavy Duty 4 Point Adjustable Sway Bar Kit suits vehicles with factory fitted sway bars	<a href="#">SHR16A</a>	1	Roll Control
Rear	Bump Stop Bush Kit - Shortened Suit lowered suspension "Use with OE Foam bump stop"	<a href="#">SPF0601K</a>	1	SuperPro SPF
Rear	Bump Stop Bush Kit - Shortened Suit Extra lowered suspension "Remove OE Foam"	<a href="#">SPF0601SLK</a>	1	SuperPro SPF
Rear	Differential Mount Insert	<a href="#">SPF4170K</a>	1	SuperPro SPF
Rear	Panhard Rod on car adjustable	<a href="#">TRC1107</a>	1	Roll Control
Rear	Panhard Rod Bush Kit Solid axle rear	<a href="#">SPF0030K</a>	1	SuperPro SPF
Rear	Panhard Rod Bush Kit Fits "Fulcrum Formula" adjustable panhard rod only	<a href="#">SPF1051K</a>	1	SuperPro SPF
Rear	Rear End Repair Kit Standard Replacement	<a href="#">KIT061RK</a>	1	Vehicle Kits
Rear	Shock Absorber Upper Bush Kit Solid & IRS axle	<a href="#">SPF0201K</a>	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm	<a href="#">SPF0385-10K</a>	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 6mm	<a href="#">SPF0385-5K</a>	2	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 6mm	<a href="#">SPF0385-5K</a>	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle, standard height vehicle	<a href="#">SPF0385K</a>	2	SuperPro SPF
Rear	Sway Bar Link Bush Kit	<a href="#">SPF2092K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Solid axle rear	<a href="#">SPF0589-21K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Solid axle rear	<a href="#">SPF0589-22K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Front Bush Kit Solid axle rear	<a href="#">SPF0016K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit Solid axle rear	<a href="#">SPF0017K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	<a href="#">SPF0255-90K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Solid axle rear	<a href="#">SPF0255K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-70K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-80K</a>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit H/Duty fully machined outer shell Performance application	<a href="#">SPF0977-90K</a>	1	SuperPro SPF