


Suspension Parts & Poly Bushings for HOLDEN COMMODORE 2002-2006 - VY-VZ Sedan & Wagon

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Radius Rod

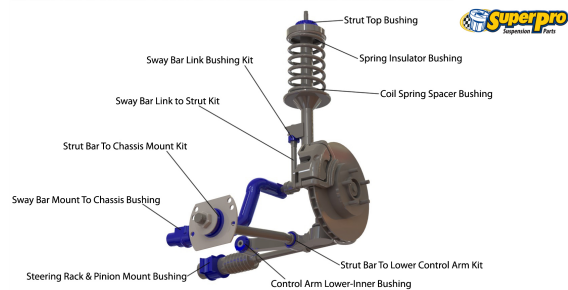

Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

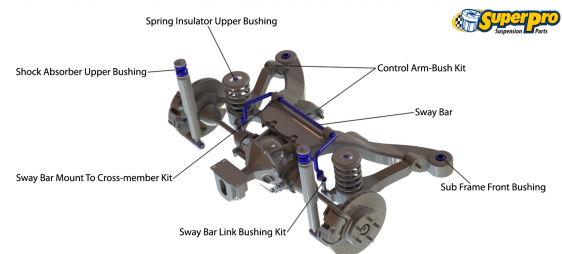

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF61A	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF14A	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF61CA	1	Roll Control
Front	Alignment Bush Kit - Front End	KIT153K	1	Vehicle Kits
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower Assembly Kit Left and Right Arms for Standard Replacement and Repair Upgrade	TRC1104	1	Roll Control
Front	Control Arm Lower-Inner Bush Kit	SPF1232K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF1632K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339EK	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Brace VY Series I only	FPB-004	1	Roll Control
Front	Strut Brace VY Series II & VZ only	FPB-005	1	Roll Control
Front	Strut Top & Bearing	SPF1590AK	1	SuperPro SPF

Front	Strut Top & Bearing	SPF1590BK	1	SuperPro SPF
Front	Sway Bar Link VY models only, does not suit VZ models	TRC4003	2	Roll Control
Front	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Front	Sway Bar Link LHS - Standard Replacement, to suit VZ	TRC4008L	1	Roll Control
Front	Sway Bar Link RHS - Standard Replacement, to suit VZ	TRC4008R	1	Roll Control
Front	Sway Bar Link Bush Kit Strut end only, Vehicle has ball joint type end at sway bar, must re-use all original washers	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Link Kit VY models Only. Does not Fit VZ Models	SPF3570K	1	SuperPro SPF
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10105	1	Roll Control
Front	Sway Bar Link Rod Replacement Bush Kit VY models Only. Does not Fit VZ Models	SPF0967RK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-32K	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit	KIT140K	1	Vehicle Kits
Rear	18mm Heavy Duty 2 Position Blade Adjustable Sway Bar	SHR50A	1	Roll Control
Rear	Bump Stop Bush Kit - Upper	SPF3906K	1	SuperPro SPF
Rear	Control Arm Bush Kit	SPF0611K	2	SuperPro SPF
Rear	Crossmember Supplement Washers Bush Kit	SPF0840K	1	SuperPro SPF
Rear	Differential Mount Insert	SPF4171K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit Suited to vehicles without "Factory Toe Adjusting Arm"	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Camber Only Kit	SPF2545K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	SPF0201K	1	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Subframe Front Bush Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF0513K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-18K	1	SuperPro SPF

Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-19K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-20K	1	SuperPro SPF