


Suspension Parts & Poly Bushings for HOLDEN COMMODORE 2002-2007 - VY-VZ Ute

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Radius Rod

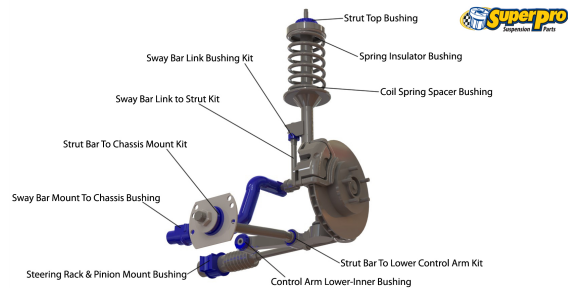

Leaf Spring Solid Axle

With Limited Lateral Location

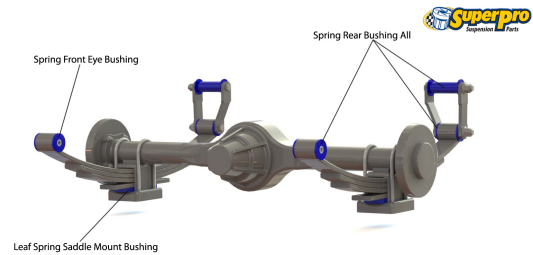

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF61A	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF14A	1	Roll Control
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar	SHF61CA	1	Roll Control
Front	Alignment Bush Kit - Front End	KIT153K	1	Vehicle Kits
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower Assembly Kit Left and Right Arms for Standard Replacement and Repair Upgrade	TRC1104	1	Roll Control
Front	Control Arm Lower-Inner Bush Kit	SPF1232K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF1632K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339EK	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Brace VY Series I only	FPB-004	1	Roll Control
Front	Strut Brace VY Series II & VZ only	FPB-005	1	Roll Control
Front	Strut Top & Bearing	SPF1590AK	1	SuperPro SPF

Front	Strut Top & Bearing	SPF1590BK	1	SuperPro SPF
Front	Sway Bar Link VY models only, does not suit VZ models	TRC4003	2	Roll Control
Front	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Front	Sway Bar Link LHS - Standard Replacement, to suit VZ	TRC4008L	1	Roll Control
Front	Sway Bar Link RHS - Standard Replacement, to suit VZ	TRC4008R	1	Roll Control
Front	Sway Bar Link Bush Kit Strut end only, Vehicle has ball joint type end at sway bar, must re-use all original washers	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Link Kit VY models Only. Does not Fit VZ Models	SPF3570K	1	SuperPro SPF
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10105	1	Roll Control
Front	Sway Bar Link Rod Replacement Bush Kit VY models Only. Does not Fit VZ Models	SPF0967RK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit	KIT140K	1	Vehicle Kits
Rear	18mm Heavy Duty 2 Position Blade Adjustable Sway Bar	SHR50A	1	Roll Control
Rear	Bump Stop Bush Kit - Upper	SPF3906K	1	SuperPro SPF
Rear	Control Arm Bush Kit	SPF0611K	2	SuperPro SPF
Rear	Crossmember Supplement Washers Bush Kit	SPF0840K	1	SuperPro SPF
Rear	Differential Mount Insert	SPF4171K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit Suited to vehicles without "Factory Toe Adjusting Arm"	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Camber Only Kit	SPF2545K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	SPF0201K	1	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Spring Rear Bush Kit All	SPF2231-8K	1	SuperPro SPF
Rear	Subframe Front Bush Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF0513K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-18K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-19K	1	SuperPro SPF

