


# Suspension Parts & Poly Bushings for JEEP CHEROKEE 1988-2001 - XJ


## Parts Application Diagrams

### Coil Spring Solid Axle

With Trailing Arms And Panhard Rod For Lateral Location - Front View

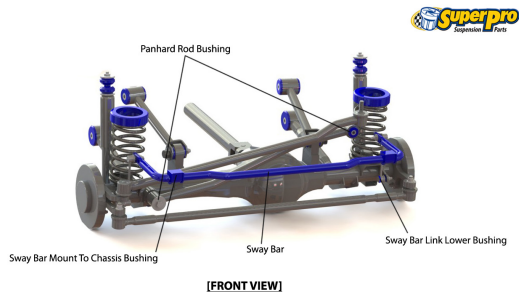

### Leaf Spring Solid Axle

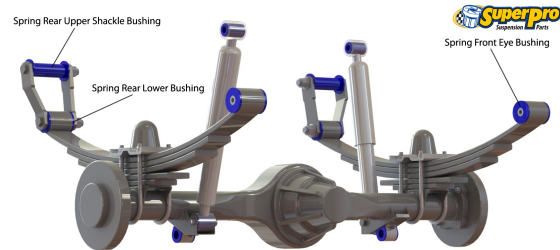

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Coil Spring Spacer Bush Kit Re-use original spacer	<a href="#">SPF1735-10K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit Re-use original spacer	<a href="#">SPF1735-15K</a>	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit Re-use original spacer	<a href="#">SPF1735-30K</a>	2	SuperPro SPF
Front	Panhard Rod To Diff Mount Bush Kit remove outer shell	<a href="#">SPF1081K</a>	1	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	<a href="#">SPF2755SK</a>	1	SuperPro SPF
Front	Sway Bar Link Lower Bush Kit	<a href="#">SPF1139K</a>	1	SuperPro SPF
Front	Sway Bar Link Upper Bush Kit Use when vehicle has no location washers	<a href="#">SPF1150K</a>	1	SuperPro SPF
Front	Sway Bar Link Upper Bush Kit Use when vehicle / shocks have location washer	<a href="#">SPF2755SK</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1138-26K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF1138-30K</a>	1	SuperPro SPF
Front	Trailing Arm Lower Bush Kit Where tube is 66.5mm long, New outer shells supplied in this kit.	<a href="#">SPF1264K</a>	1	SuperPro SPF
Front	Trailing Arm Lower Bush Kit Must re-use original outer shell, Original inner tube is 66.5 long.	<a href="#">SPF2856K</a>	1	SuperPro SPF
Front	Trailing Arm Upper Bush Kit New outer shells supplied in kit	<a href="#">SPF1263K</a>	1	SuperPro SPF
Front	Trailing Arm Upper Bush Kit Re-use original factory outer shell	<a href="#">SPF2842K</a>	1	SuperPro SPF
Rear	Leaf Spring Bush Kit 63mm wide	<a href="#">KIT071K</a>	1	Vehicle Kits
Rear	Leaf Spring Bush Kit 65mm wide	<a href="#">KIT084K</a>	1	Vehicle Kits
Rear	Spring Front Eye Bush Kit 63mm wide original springs	<a href="#">SPF0969K</a>	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit 65mm wide after-market springs only	<a href="#">SPF1737K</a>	1	SuperPro SPF
Rear	Spring Rear Eye Bush Kit	<a href="#">SPF0970K</a>	1	SuperPro SPF

	63mm wide original springs			
Rear	Spring Rear Eye Bush Kit 65mm wide after-market springs only	<a href="#">SPF1738K</a>	1	SuperPro SPF
Rear	Spring Shackle Upper Bush Kit	<a href="#">SPF1080K</a>	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit	<a href="#">SPF1139K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1138-22K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<a href="#">SPF1138-24K</a>	1	SuperPro SPF