


Suspension Parts & Poly Bushings for TOYOTA CAMRY 1997-2002 - XV20

Parts Application Diagrams

Macpherson Strut With Lower Control Arm


With Vertical Bushing In Rear Location

*As viewed from the Rear of the Vehicle

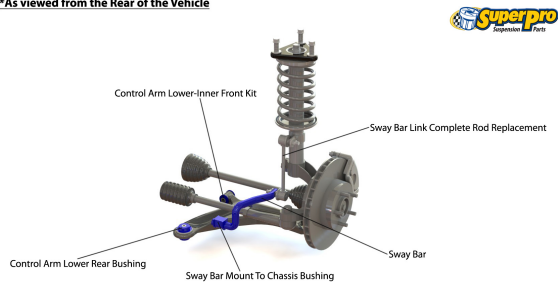

Double Link

With Trailing Arm And Chapman Strut - Front View

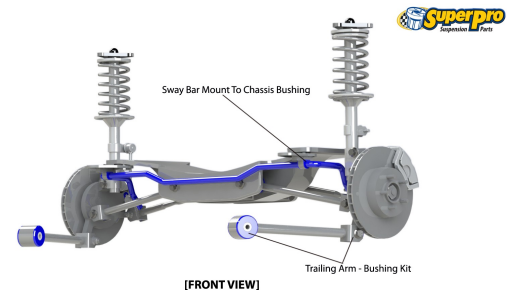

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-17K	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit Re-use original mounting pin	SPF2663K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit Standard replacement	SPF1265K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction	SPF1267K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Alignment Correction	SPF1266K	1	SuperPro SPF
Front	Engine Steady Mount Bush Kit Large end has 50mm inside diameter	SPF1348K	1	SuperPro SPF
Front	Engine Steady Mount Bush Kit Large end has 65mm inside diameter	SPF2706K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush (Power Steering) Power steering	SPF1191K	1	SuperPro SPF
Front	Sway Bar Link LHS - Standard Replacement	TRC4028L	1	Roll Control
Front	Sway Bar Link RHS - Standard Replacement	TRC4028R	1	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10200	1	Roll Control
Front	Sway Bar Mount Bush Kit Standard Size, Measure Bar Diameter 16, 17, 18, 20, 23, 24 available	SPF1132-17K	1	SuperPro SPF
Rear	Camber Adjusting Bolt Kit Adds +/- 1.5 Degree Camber	SPF4351-15K	1	SuperPro SPF
Rear	Sway Bar Link Cut To Length Link	TRC4004	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	TRC10105	1	Roll Control
Rear	Sway Bar Mount Bush Kit O.E Sway Bar Size	SPF2284-15K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit O.E Sway Bar Size	SPF2284-16K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF2284-17K	1	SuperPro SPF
Rear	Trailing Arm Bush Kit	SPF0823K	1	SuperPro SPF

