


Suspension Parts & Poly Bushings for HOLDEN STATESMAN 1990 - 1999 - VQ-VS

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Separate Radius Rod

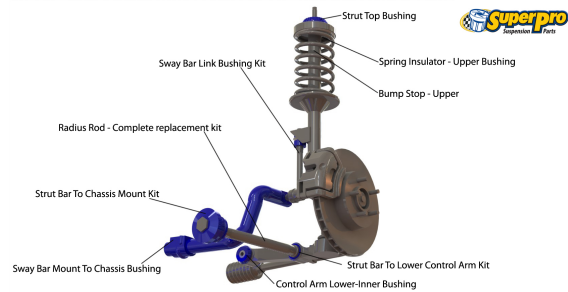

Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

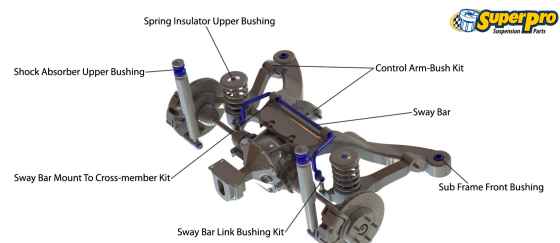

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty 4 Position Blade Adjustable Sway Bar suits VQ	SHF16A	1	Roll Control
Front	Alignment Bush Kit - Front End VQ Only	KIT151K	1	Vehicle Kits
Front	Alignment Bush Kit - Front End VR, VS	KIT152K	1	Vehicle Kits
Front	Bump Stop Bush Kit - Upper SuperPro Polyurethane Heavy Duty front strut bump stop	SPF0189K	1	SuperPro SPF
Front	Bump Stop Kit	SPF1833BK	1	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF0251K	1	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit VR-VS	SPF0842K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Strut Bar Fixed +2.0 Degree Strut bar only, use SPF0240K,SPF0756K	SPF1630K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit VB-VS Heavy Duty	SPF0240-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit VB-VS	SPF0240K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756K	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Top & Bearing does not suit VQ	SPF1590AK	1	SuperPro SPF
Front	Strut Top & Bearing does not suit VQ	SPF1590BK	1	SuperPro SPF
Front	Strut Top Bush Kit	SPF0986K	1	SuperPro SPF
Front	Sway Bar Link and Bush Kit	SPF2966BK	1	SuperPro SPF

Front	Sway Bar Link Bush Kit Bushes only to suit after-market sway bar & SPF987K	SPF0994K	1	SuperPro SPF
Front	Sway Bar Link Bush Kit Original sway bar	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "after-market" swaybar	SPF0967K	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty conversion link rod & bushing replacement kit for "original" swaybar	SPF0968K	1	SuperPro SPF
Front	Sway Bar Link Rod Kit H/Duty link rod & bushing replacement, fits from original swaybar to strut leg	SPF0987K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-26K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF
Rear	Control Arm Bush Kit IRS Independent Rear Suspension	SPF0611K	1	SuperPro SPF
Rear	Differential Mount Insert suits VR & VS	SPF4170K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Spring Insulator Bush Kit Solid axle rear, raises vehicle approximately 12mm	SPF0385-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Subframe Front Bush Kit Standard Replacement Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit Competition/Race Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link Lower Bush Kit IRS Independent Rear Suspension	SPF0513-4K	1	SuperPro SPF
Rear	Sway Bar Link Upper Bush Kit	SPF1943K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-17K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-19K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit IRS	SPF0613-20K	1	SuperPro SPF