



Suspension Parts & Poly Bushings for HOLDEN H SERIES 1971-1980 - HQ, HJ, HX, HZ, Ute, Panel Van & One Tonner Parts Application Diagrams

Double Wishbone

With Upper And Lower Wishbone Control Arms

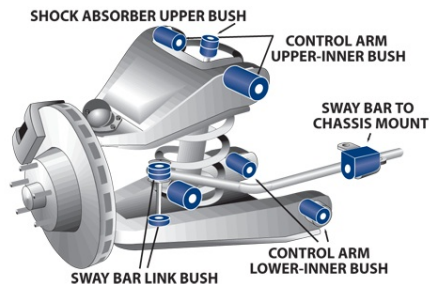

Leaf Spring Solid Axle

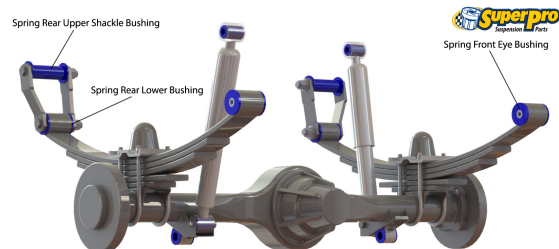

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	27mm Heavy Duty Non Adjustable Sway Bar	SHF7	1	Roll Control
Front	30mm Heavy Duty Non Adjustable Sway Bar	SHF7C	1	Roll Control
Front	Bump Stop Bush Kit - Lower	SPF0059K	1	SuperPro SPF
Front	Bump Stop Bush Kit - Upper Standard Height	SPF0658AK	1	SuperPro SPF
Front	Bump Stop Bush Kit - Upper Shortened	SPF0658K	1	SuperPro SPF
Front	Clutch Rebound Stop Bush Kit	SPF0658K	1	SuperPro SPF
Front	Complete Front End Bush Kit	KIT045FK	1	Vehicle Kits
Front	Control Arm Lower-Front Bush Kit	SPF2121-90K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Comfort Use	SPF2121-70K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Sports Use	SPF2121-80K	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit Competition Use	SPF2121-90K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit	SPF2119K	1	SuperPro SPF
Front	Radiator Support Mount Bush Kit	SPF0501K	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	SPF0938K	2	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	SPF2755SK	1	SuperPro SPF
Front	Spring Insulator Upper Bush Kit Raises vehicle approximately 20mm	SPF0271-10K	2	SuperPro SPF
Front	Spring Insulator Upper Bush Kit Raises vehicle approximately 12mm	SPF0271-6K	2	SuperPro SPF
Front	Steering Coupling Bush Kit Manual & power steering	SPF0500K	1	SuperPro SPF

Front	Sway Bar Link Bush Kit	SPF2092BK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Full edge wrap bracket	SPF0422-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF0589-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1450-27K	1	SuperPro SPF
Front and Rear	Body Mount Bush Kit Includes The Radiator Support Mounts	SPF0501K	5	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit	SPF2178-16K	1	SuperPro SPF
Rear	Spring Front Eye Bush Kit Ute ,Van, 1 tonner	SPF2241K	1	SuperPro SPF
Rear	Spring Rear Bush Kit All Ute ,Van, 1 tonner	SPF2197K	1	SuperPro SPF
Rear	Spring Slipper Pad Bush Kit Slipper pad fits between leaf springs	SPF0256K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF2092K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF0589-14K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1450-14K	1	SuperPro SPF