


Suspension Parts & Poly Bushings for CHEVROLET LUMINA 12/2000-8/2003 - VZ

Parts Application Diagrams


Macpherson Strut

With Lower Control Arm And Radius Rod

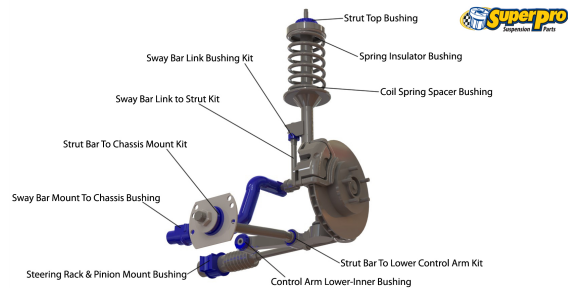

Complex IRS For Rwd

With "Wishbone" Style Lower Trailing Arm

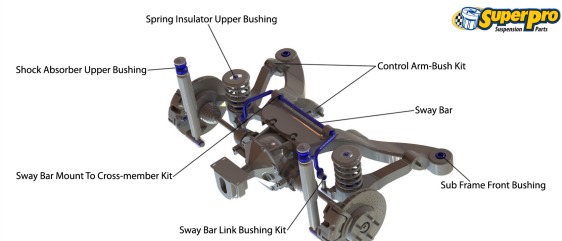

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Alignment Bush Kit - Front End	KIT153K	1	Vehicle Kits
Front	Coil Spring Spacer Bush Kit	SPF2365-10K	2	SuperPro SPF
Front	Coil Spring Spacer Bush Kit	SPF2365-5K	2	SuperPro SPF
Front	Control Arm Lower-Inner Bush Kit	SPF1232K	1	SuperPro SPF
Front	Spring Insulator Bush Kit Upper replacement of OEM 92002882	SPF2498K	1	SuperPro SPF
Front	Steering Rack & Pinion Mount Bush Kit	SPF1632K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339-90K	1	SuperPro SPF
Front	Strut Bar To Chassis Mount Bush Kit	SPF2339K	1	SuperPro SPF
Front	Strut Bar To Lower Control Arm Bush Kit	SPF0756CK	1	SuperPro SPF
Front	Strut Bolt Replacement Kit	SPF4960K	2	SuperPro SPF
Front	Strut Top & Bearing	SPF1590AK	1	SuperPro SPF
Front	Strut Top & Bearing	SPF1590BK	1	SuperPro SPF
Front	Sway Bar Link VY models only, does not suit VZ models	TRC4003	2	Roll Control
Front	Sway Bar Link Bush Kit Strut end only, Vehicle has ball joint type end at sway bar, must re-use all original washers	SPF2755SK	1	SuperPro SPF
Front	Sway Bar Link Kit VY models Only. Does not Fit VZ Models	SPF3570K	1	SuperPro SPF
Front	Sway Bar Link Rod Replacement Bush Kit VY models Only. Does not Fit VZ Models	SPF0967RK	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-27K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-28K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF1453-30K	1	SuperPro SPF

Front and Rear	Enhancement Bush Kit suits Series I	KIT138K	1	Vehicle Kits
Front and Rear	Enhancement Bush Kit suits Series II -on	KIT140K	1	Vehicle Kits
Rear	Bump Stop Bush Kit - Upper	SPF3906K	1	SuperPro SPF
Rear	Control Arm Bush Kit only one kit required if SPF2545K is fitted	SPF0611K	1	SuperPro SPF
Rear	Crossmember Supplement Washers Bush Kit	SPF0840K	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit Suited to vehicles without "Factory Toe Adjusting Arm"	SPF0877FK	1	SuperPro SPF
Rear	IRS Adjusting Camber & Toe Kit suits Series I	SPF0877K	1	SuperPro SPF
Rear	IRS Adjusting Camber Only Kit suits Series II - on	SPF2545K	1	SuperPro SPF
Rear	IRS Adjusting Kit Toe Only Bush Kit suits Series I	SPF0877TK	1	SuperPro SPF
Rear	IRS Bush Kit Removal Tool Specialised tool for removal of OE bushings	SPF3211K	1	SuperPro SPF
Rear	IRS Fixed Camber & Adjustable Toe Kit	SPF0877ZK	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit	SPF0201K	1	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 15mm	SPF1358-10K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 9mm	SPF1358-6K	2	SuperPro SPF
Rear	Spring Insulator Lower Bush Kit IRS Raises vehicle approximately 12mm	SPF1358-8K	2	SuperPro SPF
Rear	Subframe Front Bush Kit Standard Replacement Kit	SPF3267K	1	SuperPro SPF
Rear	Subframe Front Bush Kit Competition/Race Kit	SPF3367K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit	SPF0513K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-18K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-19K	1	SuperPro SPF
Rear	Sway Bar Mount To Crossmember Bush Kit	SPF0613-20K	1	SuperPro SPF