


Suspension Parts & Poly Bushings for LEXUS GX 2001-2009 - GX470 (J120)

Parts Application Diagrams


Double Control Arm With Strut & Coil

With Separate Upper & Lower Control A Arms

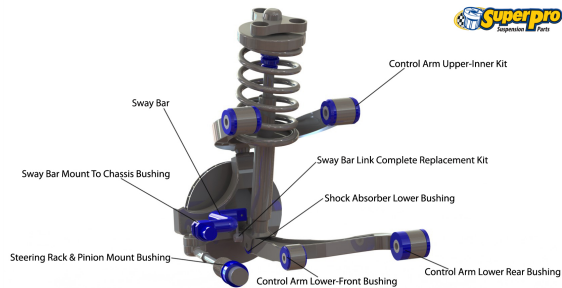

Coil Spring Solid Axle

With Panhard Rod And Lower Trailing Arms

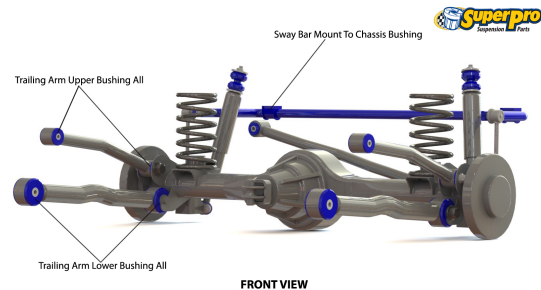

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	30mm Heavy Duty 3 Position Blade Adjustable Sway Bar will not fit KDSS vehicles	RC0026FZ-30	1	Roll Control
Front	Control Arm Lower Complete Assembly Kit - Double Offset Left and Right Arms for Lifted Vehicles with Extra Caster and Camber Correction	TRC482	1	Roll Control
Front	Control Arm Lower Complete Assembly Kit - Standard Left and Right Arms for Standard Replacement and Repair Upgrade	TRC481	1	Roll Control
Front	Control Arm Lower-Inner Front & Rear Bush Kit	KIT180K	1	Vehicle Kits
Front	Control Arm Lower-Inner Front Bush Kit	SPF2834K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit - Alignment Correction Camber and Caster Adjustment	SPF4691K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit - Standard Replacement	SPF4690K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit	SPF2835K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Alignment Correction Camber Adjustable	SPF4347K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Standard Replacement	SPF4346K	1	SuperPro SPF
Front	Control Arm Upper Complete Assembly - Adjustable Left and Right Arms for Lifted Vehicles with Caster and Camber Correction	TRC480	1	Roll Control
Front	Control Arm Upper Complete Assembly - Fixed Offset Left and Right Fixed Offset Arms for Lifted Vehicles with Caster and Camber Correction	TRC6480	1	Roll Control
Front	Control Arm Upper-Inner Bush Kit - Alignment Correction Camber Adjustable	SPF3230K	1	SuperPro SPF
Front	Control Arm Upper-Inner Bush Kit - Standard Replacement	SPF2845K	1	SuperPro SPF
Front	ReadyStrut Top Caps	RS002	2	SuperPro SPF
Front	Shock Absorber Lower Bush Kit Will not fit Koni & EFS Shocks	SPF2348PK	1	SuperPro SPF
Front	Shock Absorber Lower Bush Kit	SPF3591K	1	SuperPro SPF
Front	Shock Absorber Upper Bush Kit	SPF3757K	1	SuperPro SPF

2WD Vehicles

Front	Steering Rack & Pinion Mount Bush (Power Steering)	SPF3144K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2506-19K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	SPF2506-29K	1	SuperPro SPF
Front and Rear	Enhancement Bush Kit - Offset	KIT204K	1	Vehicle Kits
Rear	24mm Heavy Duty 3 Position Blade Adjustable Sway Bar	RC0026RZ-24	1	Roll Control
Rear	Panhard Rod Bush Kit Replaces both ends of the bar	SPF2836K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1487-23K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1487-24K	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	SPF1487-25K	1	SuperPro SPF
Rear	Trailing Arm Lower Bush Kit	SPF2461K	2	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit	SPF1760K	2	SuperPro SPF