


# Suspension Parts & Poly Bushings for FORD AUSTRALIA LASER 2001-09/2002 - KQ

## Parts Application Diagrams


### Generic Diagram

For illustrative purposes only

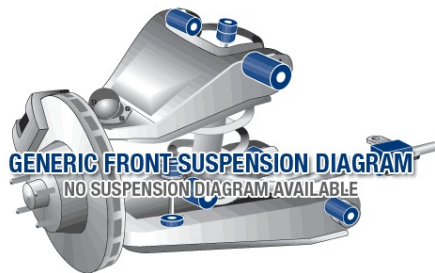

### Generic Diagram

For illustrative purposes only

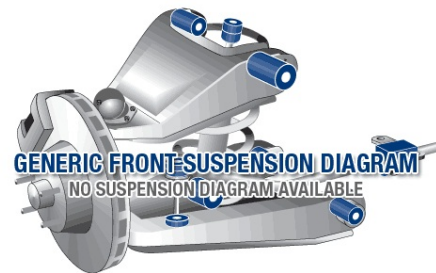

## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Front	Control Arm Lower-Front Bush Kit	<a href="#">SPF2453K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit PS & DS standard	<a href="#">SPF2454K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Double Offset Alignment Correction	<a href="#">SPF2574K</a>	1	SuperPro SPF
Front	Control Arm Lower-Rear Bush Kit - Single Offset Alignment Correction	<a href="#">SPF2573K</a>	1	SuperPro SPF
Front	Sway Bar Link Standard Replacement	<a href="#">TRC4035</a>	2	Roll Control
Front	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC10200</a>	1	Roll Control
Front	Sway Bar Mount Bush Kit Measure bar diameter 20, 22, 24mm available	<a href="#">SPF2620-22K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 20, 22, 24mm available	<a href="#">SPF2620-24K</a>	1	SuperPro SPF
Rear	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees Camber	<a href="#">SPF4351-12K</a>	1	SuperPro SPF
Rear	Sway Bar Link Cut To Length Link	<a href="#">TRC4004</a>	2	Roll Control
Rear	Sway Bar Link Kit - Heavy Duty Adjustable	<a href="#">TRC10105</a>	1	Roll Control
Rear	Sway Bar Mount Bush Kit Measure bar diameter 16, 17, 20, 21mm available	<a href="#">SPF2621-16K</a>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit Measure bar diameter 16, 17, 20, 21mm available	<a href="#">SPF2621-20K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit 40mm Outside diameter bushing	<a href="#">SPF0906K</a>	1	SuperPro SPF
Rear	Trailing Arm Lower-Rear Bush Kit 44mm Outside diameter bushing.	<a href="#">SPF2744K</a>	1	SuperPro SPF