


Suspension Parts & Poly Bushings for CHRYSLER NEON 08/1999-12/2006 - II

Parts Application Diagrams

Macpherson Strut With Lower Control Arm


With Vertical Bushing in Rear Location

*As viewed from the Rear of the Vehicle

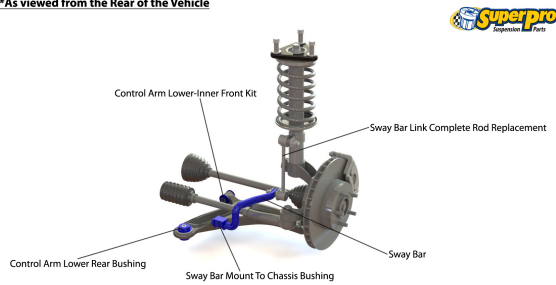

Double Link

With Trailing Arms And Panhard Rod For Lateral Location - Front View

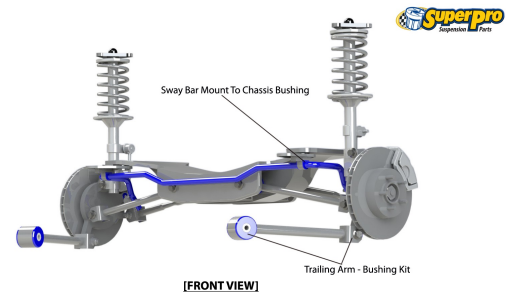

Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-12K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit Standard replacement	SPF3341K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit standard replacement	SPF3342K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Double Offset Alignment Correction	SPF3344K	1	SuperPro SPF
Front	Control Arm Lower-Inner Rear Bush Kit - Single Offset Alignment Correction	SPF3343K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter, 22, 27mm available	SPF2271-22K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter, 22, 27mm available	SPF2271-27K	1	SuperPro SPF
Rear	Sway Bar Link Bush Kit Upper & lower	SPF2272K	1	SuperPro SPF
Rear	Sway Bar Mount to Beam Axle Bush Kit	SPF2273-17K	1	SuperPro SPF
Rear	Sway Bar Mount to Beam Axle Bush Kit	SPF2273-19K	1	SuperPro SPF