


Suspension Parts & Poly Bushings for LAND ROVER FREELANDER 02/1998-10/2006 - LN

Parts Application Diagrams

Generic Diagram

For illustrative purposes only

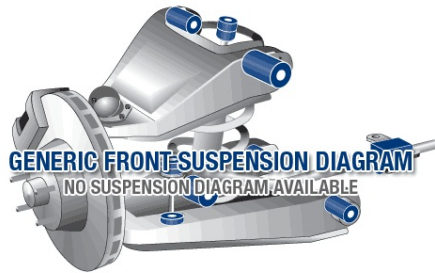

Generic Diagram

For illustrative purposes only



Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-14K	1	SuperPro SPF
Front	Camber Adjusting Bolt Kit Adds +/- 1.5 Degrees camber	SPF4351-17K	1	SuperPro SPF
Front	Control Arm Lower-Inner Front Bush Kit	SPF1759K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 20mm available	SPF1763-20K	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit Measure bar diameter 20mm available	SPF1763-21K	1	SuperPro SPF
Rear	Control Arm Bush Kit Front control arm inner bush.	SPF1762K	1	SuperPro SPF
Rear	Control Arm Front Bush Kit Front control arm outer bush	SPF1761K	1	SuperPro SPF
Rear	Control Arm Rear Bush Kit Rear control arm inner & outer bushes	SPF1761K	2	SuperPro SPF
Rear	Trailing Arm Front Bush Kit	SPF1760K	1	SuperPro SPF