


# Suspension Parts & Poly Bushings for LAND ROVER DEFENDER 1990-2000 - Chassis LA

## Parts Application Diagrams

### Generic Diagram

For illustrative purposes only

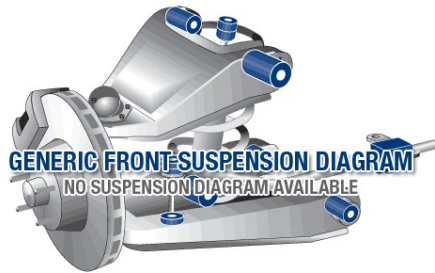

### Generic Diagram

For illustrative purposes only



## Available SuperPro Parts

Position	Part Name	Part No.	Qty/Car	Sub Brand
Front	Panhard Rod Bush Kit	<a href="#">SPF0194K</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit	<a href="#">SPF0195K</a>	1	SuperPro SPF
Front	Radius Arm To Chassis Mount Bush Kit Standard replacement kit	<a href="#">SPF0206K</a>	1	SuperPro SPF
Front	Radius Arm To Chassis Setback Bush Kit To correct slight pull to left (RH drive vehicle) Change of approx 0.5 degree in setback	<a href="#">SPF2717K</a>	1	SuperPro SPF
Front	Radius Arm To Chassis Setback Bush Kit To correct slight pull to left (RH drive vehicle) Change of approx 1.0 degree in setback	<a href="#">SPF2718K</a>	1	SuperPro SPF
Front	Radius Arm To Diff Mount Bush Kit - Caster Correction Caster Increase	<a href="#">SPF2509K</a>	1	SuperPro SPF
Front	Shock Absorber Upper & Lower Bush Kit Original shock absorber	<a href="#">SPF0075K</a>	1	SuperPro SPF
Front	Shock Absorber Upper & Lower Bush Kit After-market shock absorbers	<a href="#">SPF1879K</a>	1	SuperPro SPF
Front	Sway Bar Link Bush Kit	<a href="#">SPF0078K</a>	1	SuperPro SPF
Front	Sway Bar Mount Bush Kit	<a href="#">SPF0666-25K</a>	1	SuperPro SPF
Front and Rear	Radius Arms & Panhard Rods Bush Kit	<a href="#">KIT043AK</a>	1	Vehicle Kits
Front and Rear	Radius Arms & Panhard Rod Bush Kit - Caster Correction	<a href="#">KIT043AADJK</a>	1	Vehicle Kits
Rear	Radius Arm To Diff Mount Bush Kit	<a href="#">SPF0129K</a>	1	SuperPro SPF
Rear	Radius Arm To Chassis Mount Bush Kit	<a href="#">SPF0323K</a>	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit Original shock absorber	<a href="#">SPF0075K</a>	1	SuperPro SPF
Rear	Shock Absorber Lower Bush Kit	<a href="#">SPF2656K</a>	1	SuperPro SPF
Rear	Shock Absorber Upper Bush Kit Original shock absorber	<a href="#">SPF0779K</a>	1	SuperPro SPF

Rear	Sway Bar Link Bush Kit	<b>SPF0078K</b>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit	<b>SPF0666-19K</b>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit 28mm bracket width, 2 Bolt fixing, replaces OEM # EGP1889, 90 Models Chassis Prefix XA on	<b>SPF1697-18K</b>	1	SuperPro SPF
Rear	Sway Bar Mount Bush Kit 38mm bracket width, 4 Bolt fixing, Bar diameter 18 & 19mm ava - replaces OEM # NRC5674, 110 & 130 Models Chassis Prefix XA on	<b>SPF2303-19K</b>	1	SuperPro SPF
Rear	Trailing Arm Upper Bush Kit Upper A arm to chassis bush	<b>SPF0128K</b>	1	SuperPro SPF